

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400112 PWS NAME: BETTSVILLE VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458085 FACILITY NAME: BETTSVILLE VILLAGE

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458085. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400212 PWS NAME: BLOOMVILLE VILLAGE PWS

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458086 FACILITY NAME: BLOOMVILLE VILLAGE

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458086. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400411 PWS NAME: FOSTORIA CITY

PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458088 FACILITY NAME: FOSTORIA CITY

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
TOTAL ORGANIC CARBON (TOC)		1 Paired Sample Set Monthly *
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 4/1/2011 and 6/30/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 4/1/2011 and 4/30/2011 1 Sample(s) between 5/1/2011 and 5/31/2011 1 Sample(s) between 6/1/2011 and 6/30/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458088. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

Paired Sample Set: * A paired sample set refers to one source water and one treated water sample. A source water alkalinity is also required at the same time the TOC sample is taken

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>TOC Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400411 PWS NAME: FOSTORIA CITY

PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: DS000

FACILITY NAME: FOSTORIA, CITY OF DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	30 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 4 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	15 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately. You should also continue to take Routine Samples according to this schedule.* If you have any questions, please contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes													
<i>Lead & Copper Sample Date(s):</i>													
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>			<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>			<i>Oct - Dec Sample Date(s)</i>	
<i>TCR Monthly Sample Date(s):</i>													
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>	
<i>Total Chlorine Sample Date(s):</i>													

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400512 PWS NAME: GREEN SPRINGS VILLAGE PWS
PWS TYPE: Community SOURCE: Purchased Surface Water Sample Monitoring Point: DS000
FACILITY NAME: GREEN SPRINGS, VLG. OF DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	2 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes											
Lead & Copper Sample Date(s):											
Jan - Mar Sample Date(s)			Apr - Jun Sample Date(s)			Jul - Sept Sample Date(s)			Oct - Dec Sample Date(s)		
HAA5 & TTHM Quarterly Sample Date(s):											
Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
TCR Monthly Sample Date(s):											
Total Chlorine Sample Date(s):											

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400614 PWS NAME: OHIO AMERICAN WATER CO-TIFFIN DISTRICT
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: EP001
STATE FACILITY ID: 7458090 FACILITY NAME: OAWC TIFFIN DISTRICT

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
TOTAL ORGANIC CARBON (TOC)		1 Paired Sample Set Monthly *
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 10/1/2011 and 12/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 4/1/2011 and 4/30/2011 1 Sample(s) between 5/1/2011 and 5/31/2011 1 Sample(s) between 6/1/2011 and 6/30/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 2 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 3 List Below	Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 4 List Below	1 Sample(s) between 4/1/2011 and 6/30/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458090. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

Paired Sample Set: * A paired sample set refers to one source water and one treated water sample. A source water alkalinity is also required at the same time the TOC sample is taken

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

SOC Group 2 Chemicals: CARBOFURAN - 2046, OXAMYL (VYDATE) - 2036, PICLORAM - 2040, 2,4-D - 2105, PENTACHLOROPHENOL - 2326

SOC Group 3 Chemicals: BHC-GAMMA (LINDANE) - 2010, METHOXYCHLOR - 2015, DIQUAT - 2032, GLYPHOSATE - 2034, POLYCHLORINATED BIPHENYLS (PCB) - 2383

SOC Group 4 Chemicals: BENZO (A) PYRENE - 2306, ENDOTHALL - 2033, DI(2-ETHYLHEXYL) - ADIPATE - 2035, DI(2-ETHYLHEXYL) - PHTHALATE - 2039

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>TOC Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												
<i>SOC Group 4 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400712 PWS NAME: FOSTORIA MOBILE ESTATES

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458091 FACILITY NAME: FOSTORIA MOBILE ESTATES

Groundwater Rule Substantial Treatment System

Effective Date: 5/27/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2011 and 10/31/2011
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	1 Sample(s) between 6/1/2011 and 10/31/2011
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 7/1/2011 and 9/30/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 6/1/2011 and 10/31/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458091. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
<i>INORGANIC Sample Date(s):</i>				
<i>ARSENIC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>NITRATE Sample Date(s):</i>				
<i>RADIOLOGICAL Sample Date(s):</i>				
<i>VOC Sample Date(s):</i>				
<i>SOC Group 1 Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400712 PWS NAME: FOSTORIA MOBILE ESTATES

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: FOSTORIA MOBILE ESTATES DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 5/27/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>HAA5 & TTHM Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400812 PWS NAME: REPUBLIC VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458092 FACILITY NAME: REPUBLIC VILLAGE

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458092. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400812 PWS NAME: REPUBLIC VILLAGE

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: REPUBLIC, VILLAGE OF DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
<i>Lead & Copper Sample Date(s):</i>												
<i>TCR Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>Total Chlorine Sample Date(s):</i>												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400912 PWS NAME: RUFFING FAMILY CARE CENTER
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 7458093 FACILITY NAME: RUFFING FAMILY CARE CENTER
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458093. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>VOC Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400912 PWS NAME: RUFFING FAMILY CARE CENTER

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: RUFFING FAMILY CARE CENTER DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes												
HAA5 & TTHM Sample Date(s):												
TCR Monthly Sample Date(s):	Jan	Feb	Mar	Apr	May	Jun	Jul	Aug	Sept	Oct	Nov	Dec
Total Chlorine Sample Date(s):												

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7401212 PWS NAME: POPLAR VILLAGE MHP

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458094 FACILITY NAME: POPLAR VILLAGE STU 1

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458094. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>ARSENIC Quarterly Sample Date(s):</i>				
<i>NITRATE Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7401212 PWS NAME: POPLAR VILLAGE MHP

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP002

STATE FACILITY ID: 7460593 FACILITY NAME: POPLAR VILLAGE STU 2

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
ARSENIC	ARSENIC - 1005	1 Sample(s) Quarterly
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP002 and the State Facility ID is 7460593. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
<i>ARSENIC Quarterly Sample Date(s):</i>				
<i>NITRATE Sample Date(s):</i>				
<i>Date CCR sent to Ohio EPA:</i>				

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7401312 PWS NAME: BROOK PARK ESTATES MHP PWS
PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001
STATE FACILITY ID: 7458095 FACILITY NAME: BROOK PARK ESTATES MHP
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458095. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7401412 PWS NAME: HOPEWELL ESTATES MHP

PWS TYPE: Community SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458096 FACILITY NAME: HOPEWELL ESTATES MHP

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458096. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
<i>NITRATE Sample Date(s):</i>
<i>Date CCR sent to Ohio EPA:</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7430012 PWS NAME: LEAFY OAKS CAMPGROUND INC.

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 7/18/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458097 FACILITY NAME: LEAFY OAKS CAMPGROUND, INC STU 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

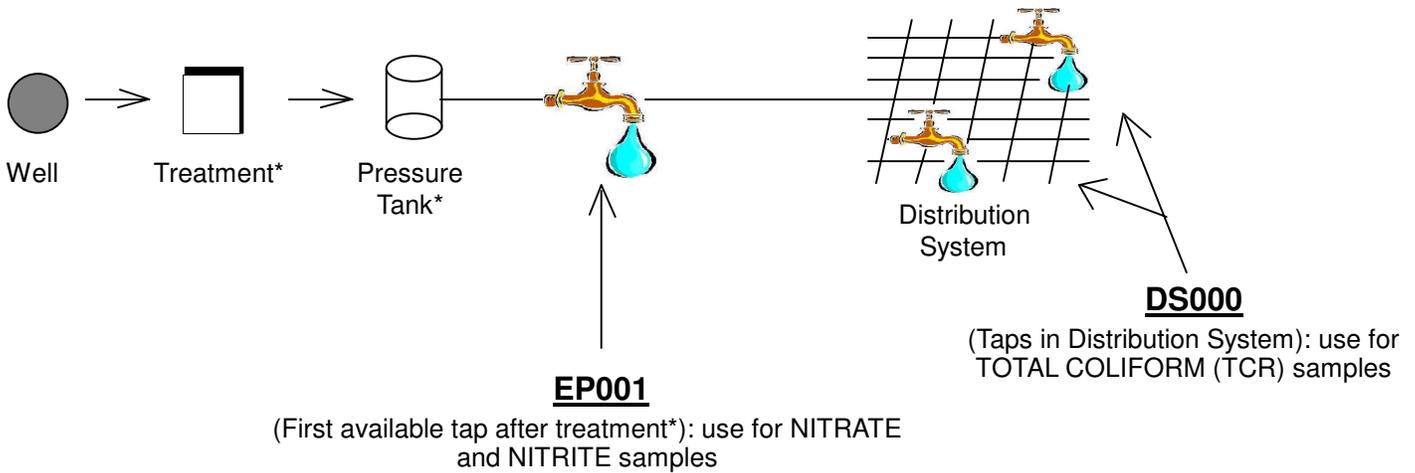

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes
Nitrate Sample Date(s):

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7430012 PWS NAME: LEAFY OAKS CAMPGROUND INC.

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 7/18/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7460594 FACILITY NAME: LEAFY OAKS CAMPGROUND, INC. STU 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP002
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

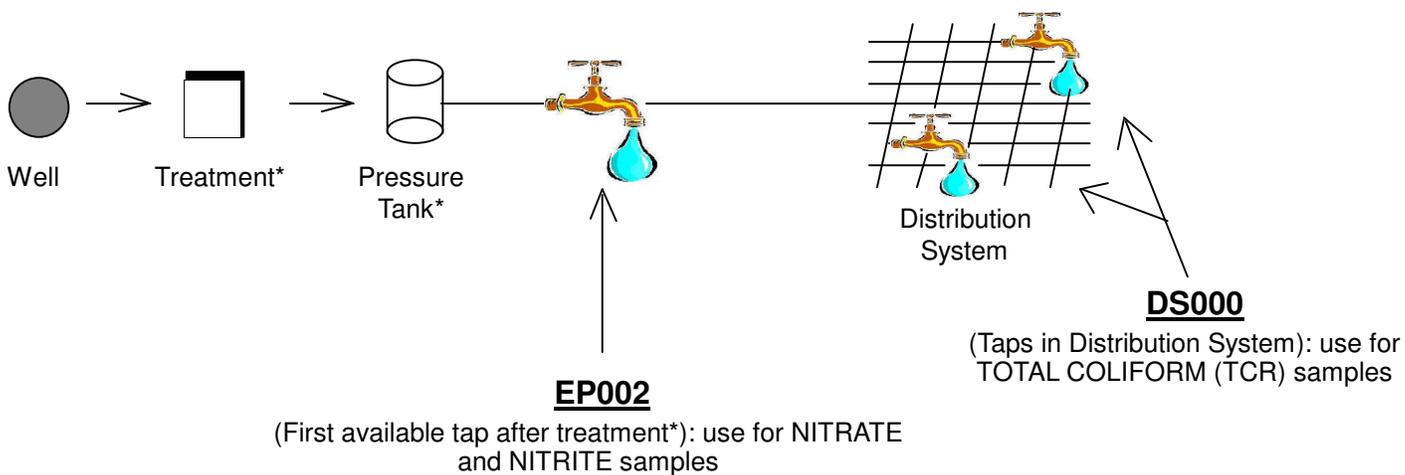

* If system does not have treatment, EP002 is the first tap after the well.

Use for Sample Tracking Purposes
Nitrate Sample Date(s):

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7430212 PWS NAME: AMERICAN LEGION POST 354

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458098 FACILITY NAME: AMERICAN LEGION 354

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

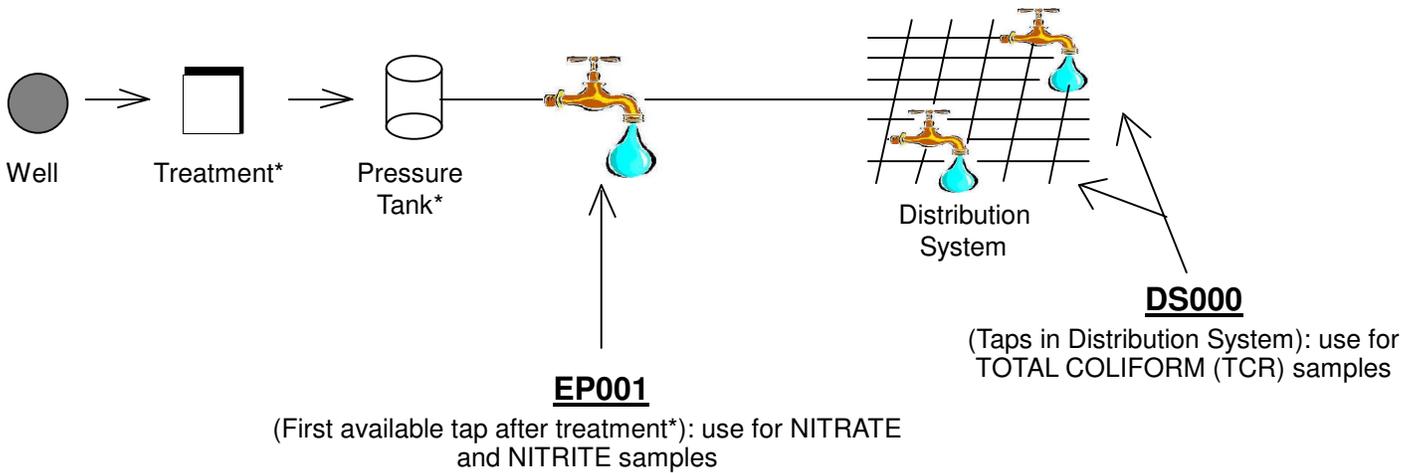

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7430612 PWS NAME: CARMEUSE LIME INC-MAPLE GROVE OPER PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7462417 FACILITY NAME: CARMEUSE LIME INC-MAPLE GROVE OPERATIONS

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) Quarterly
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7462417. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes				
<i>NITRATE Sample Date(s):</i>				
<i>VOC Quarterly Sample Date(s):</i>	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7430612 PWS NAME: CARMEUSE LIME INC-MAPLE GROVE OPER PWS
PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: CARMEUSE LIME INC-MAPLE GROVE DIST
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 7/1/2011 and 12/31/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
Lead & Copper Initial Monitoring Sample Date(s):	1st Half Sample Date(s)		2nd Half Sample Date(s)	
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7431312 PWS NAME: NW OHIO CHRISTIAN YOUTH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458101 FACILITY NAME: NW OHIO CHRISTIAN YOUTH CAMP 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

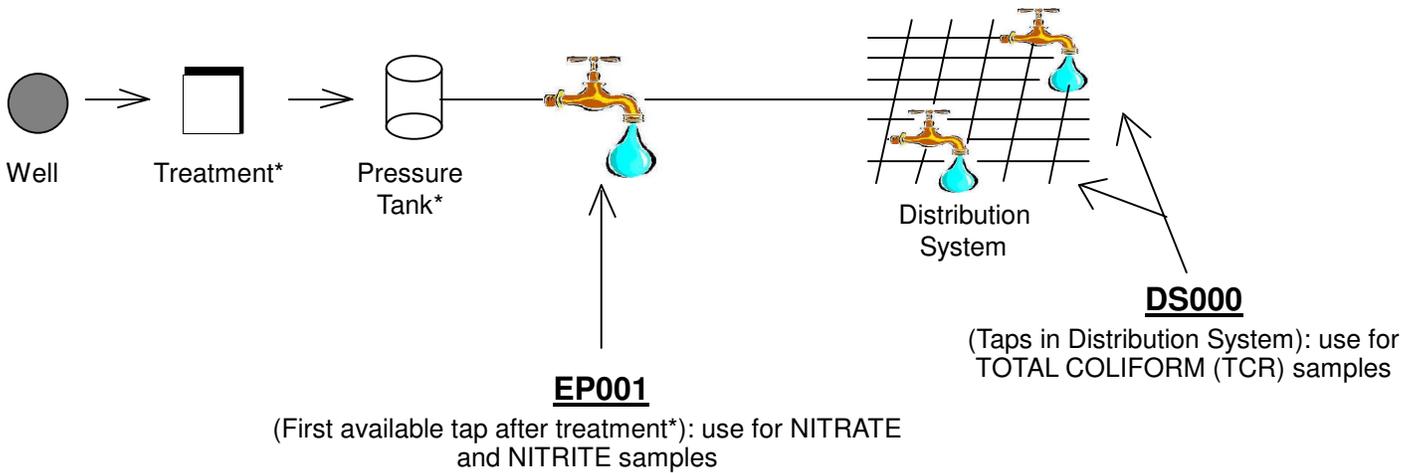

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7432012 PWS NAME: CLINTON ELEMENTARY SCHOOL PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458104 FACILITY NAME: CLINTON ELEM SCHOOL

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458104. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes

NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7432012 PWS NAME: CLINTON ELEMENTARY SCHOOL PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: CLINTON ELEM SCHOOL DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule.

Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.

If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7432112 PWS NAME: CLINTON HEIGHTS GOLF COURSE PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458105 FACILITY NAME: CLINTON HTS GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

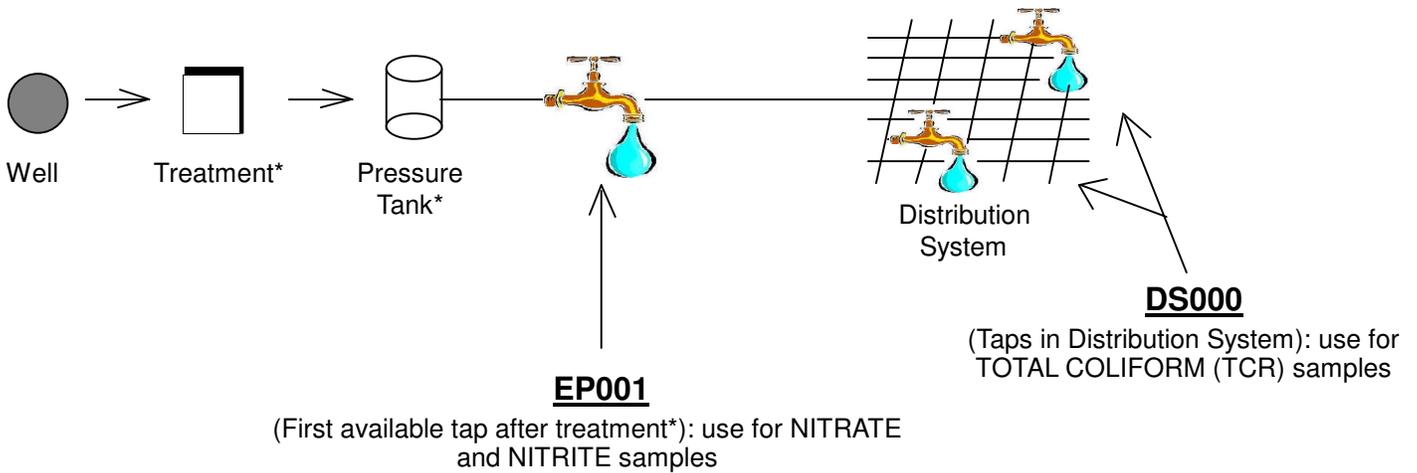

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7432212 PWS NAME: CLINTON LAKE CAMPING 1 PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458106 FACILITY NAME: CLINTON LAKE CAMPGROUND NO 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

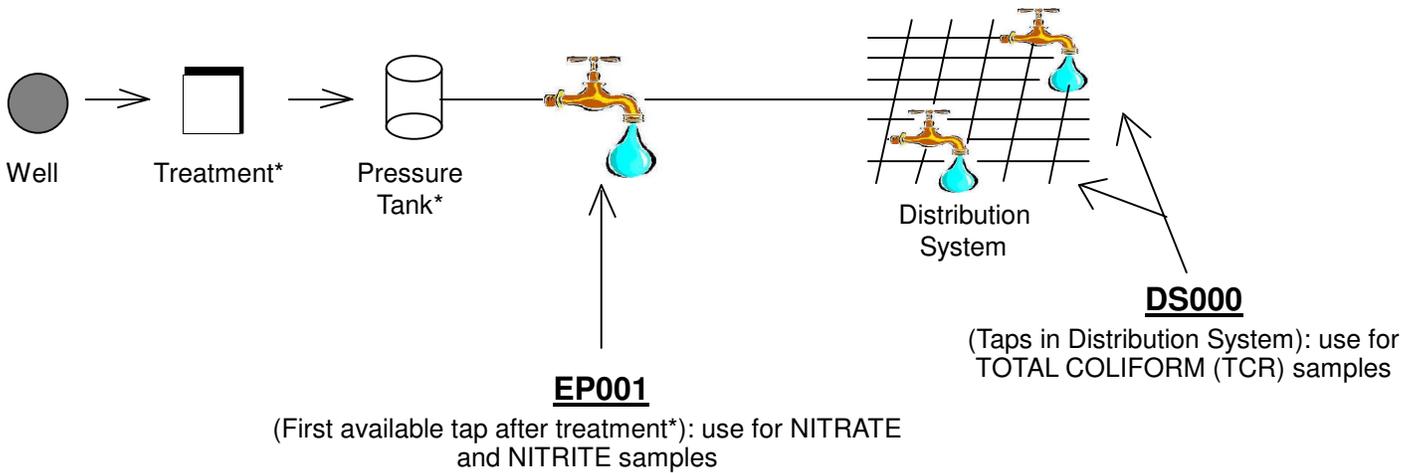

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7432312 PWS NAME: CLINTON LAKE CAMPING 2 PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458107 FACILITY NAME: CLINTON LAKE CAMPGROUND NO 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

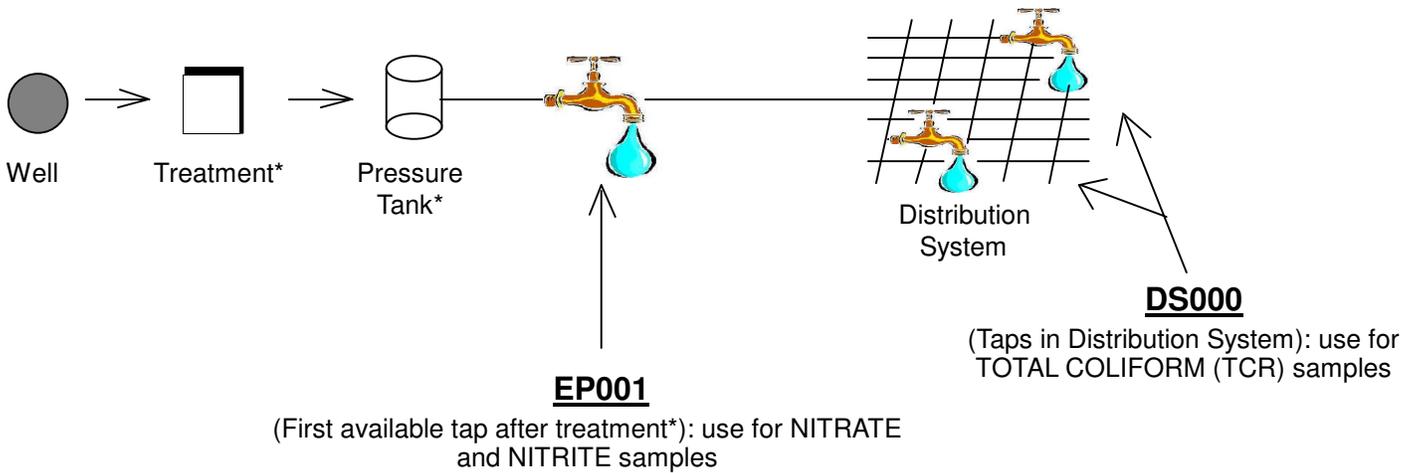

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7433212 PWS NAME: SONNY JACKS PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458109 FACILITY NAME: SONNY JACKS

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

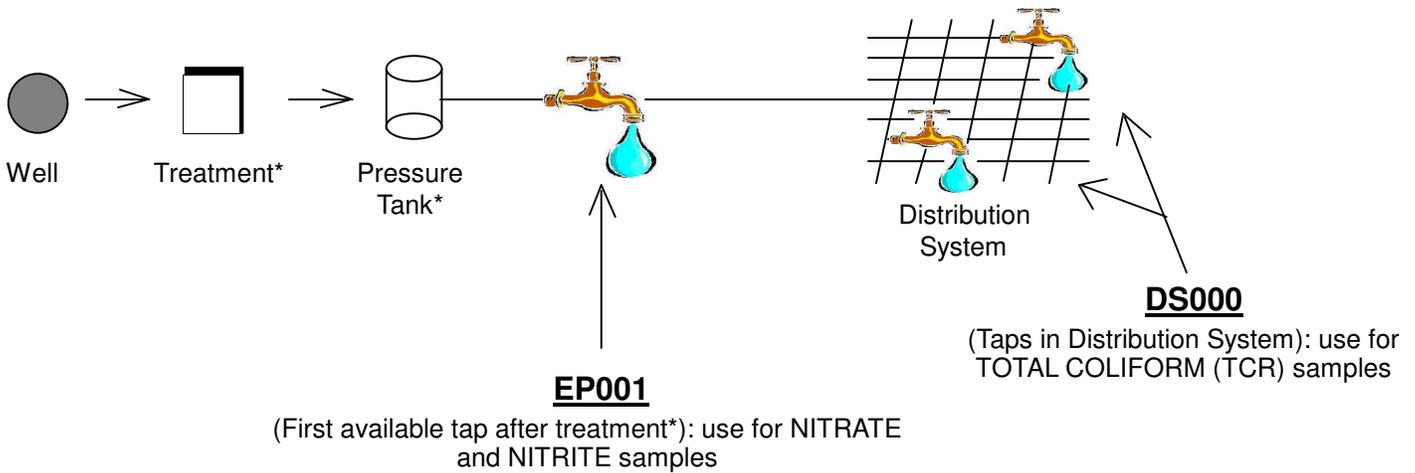

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7434412 PWS NAME: HERITAGE LANES
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458115 FACILITY NAME: HERITAGE LANES

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

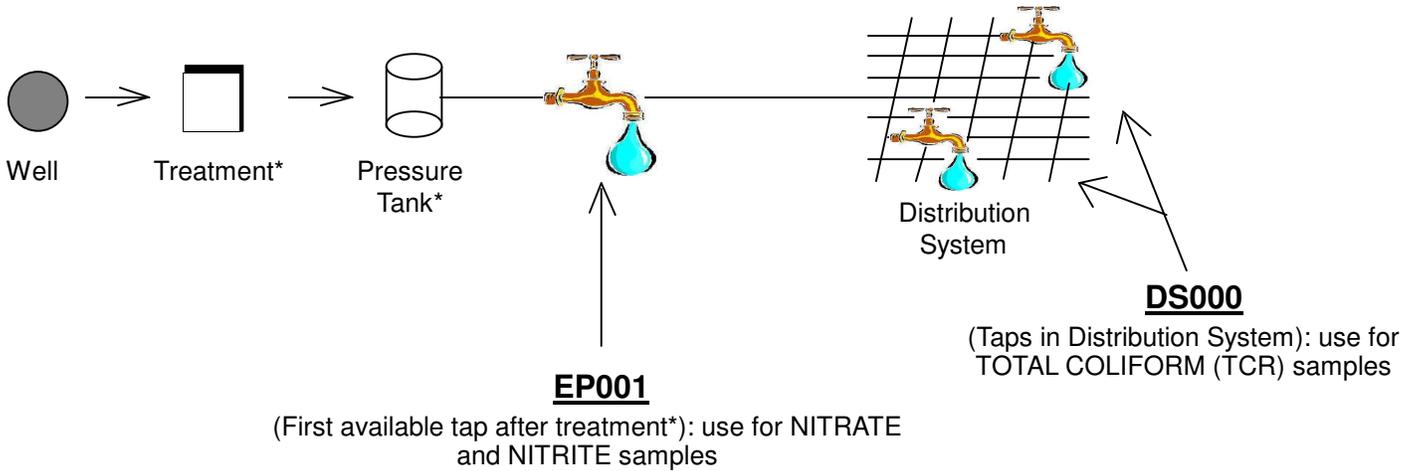

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7434612 PWS NAME: GOOD TIME TAVERN
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458116 FACILITY NAME: GOOD TIME TAVERN

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

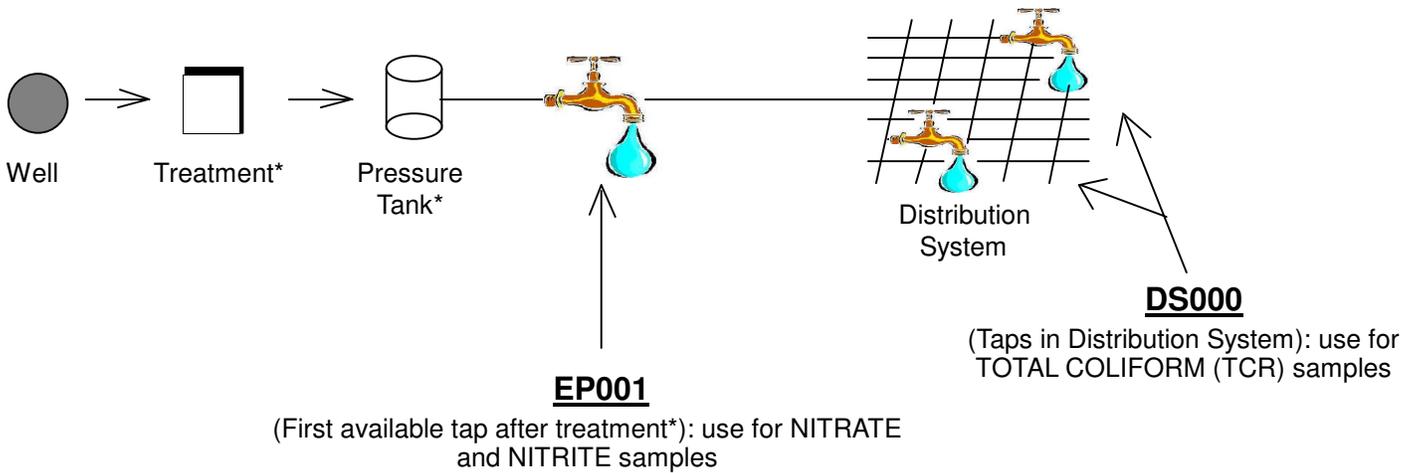

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7434812 PWS NAME: HAACK FARMS AMLC
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458118 FACILITY NAME: HAACK FARMS AMLC

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 6/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

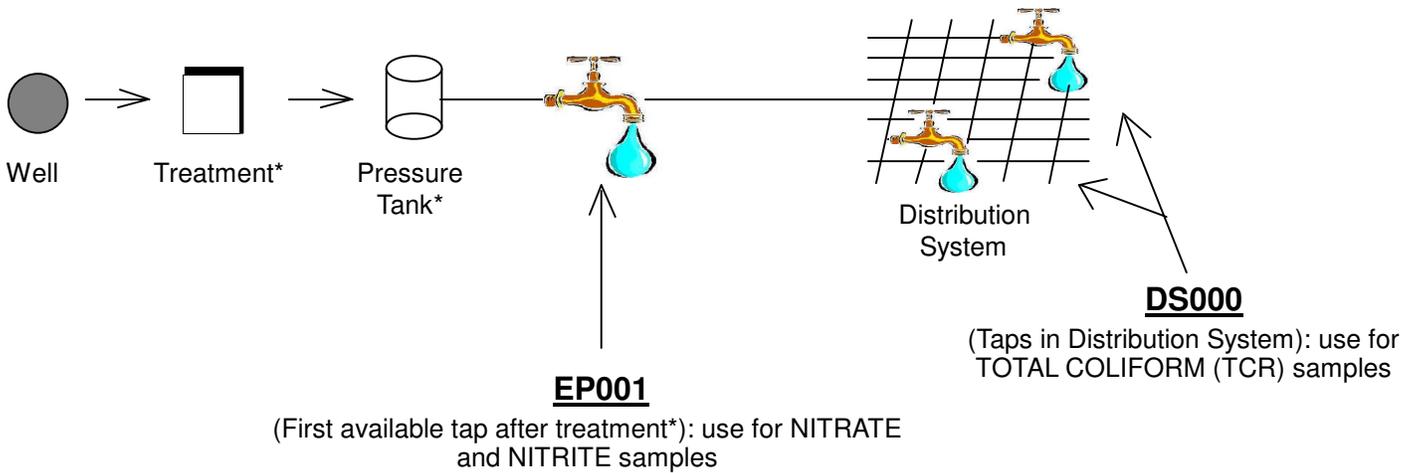

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7434912 PWS NAME: HARMONY UNITED METHODIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458119 FACILITY NAME: HARMONY UNITED METH CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

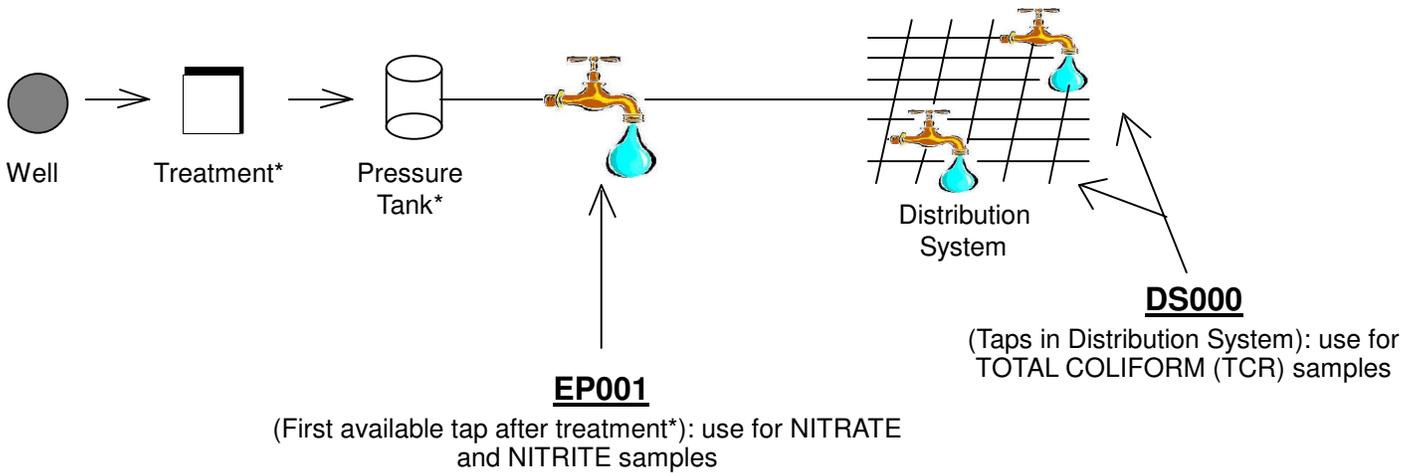

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7435312 PWS NAME: HOPEWELL-LOUDON SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458121 FACILITY NAME: HOPEWELL LOUDEN SCHOOL

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458121. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7435312 PWS NAME: HOPEWELL-LOUDON SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: HOPEWELL-LOUDON SCHOOL DISTRIBUTION

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
TCR Quarterly Sample Date(s):	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7435712 PWS NAME: JOLLYS DRIVE IN PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458124 FACILITY NAME: JOLLYS DRIVE IN

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 3/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

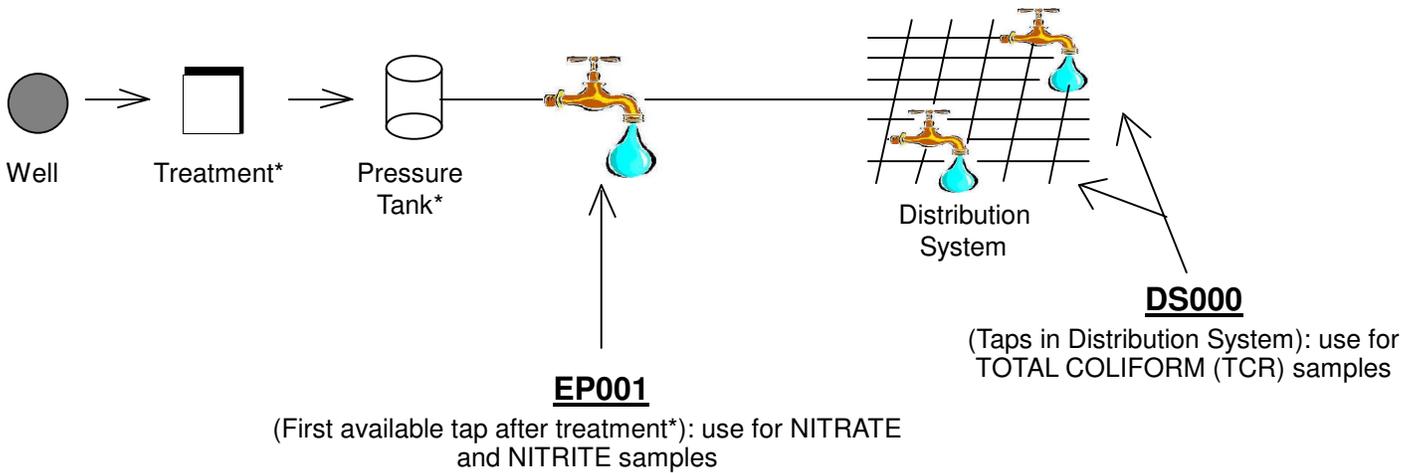

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7435912 PWS NAME: LOUDON MEADOWS GOLF COURSE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458125 FACILITY NAME: LOUDON MEADOWS GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

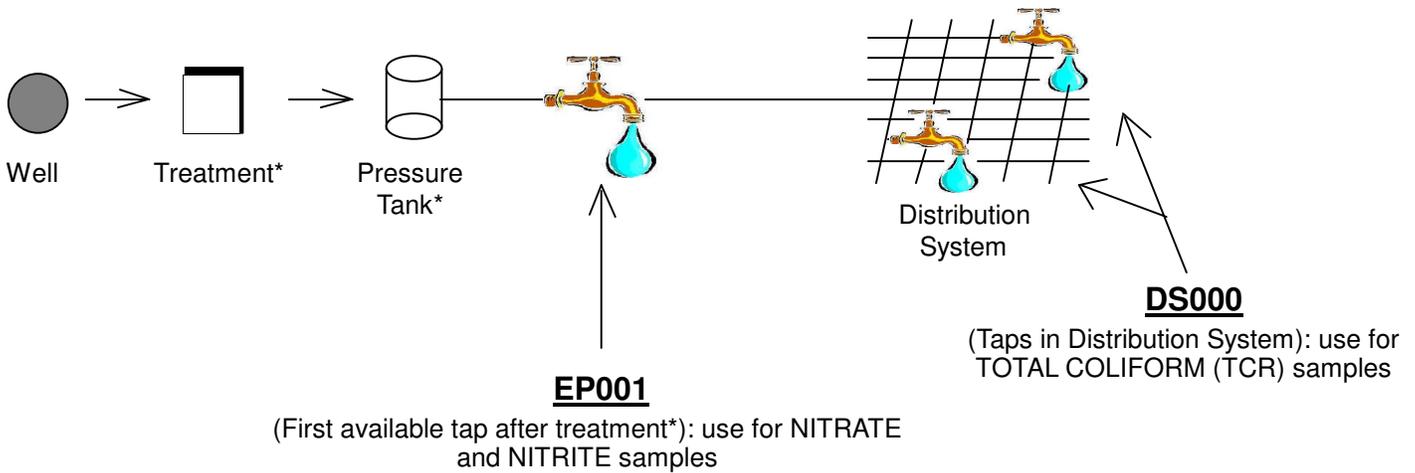

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436112 PWS NAME: SONI JUNCTION PWS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458126 FACILITY NAME: SONI JUNCTION

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

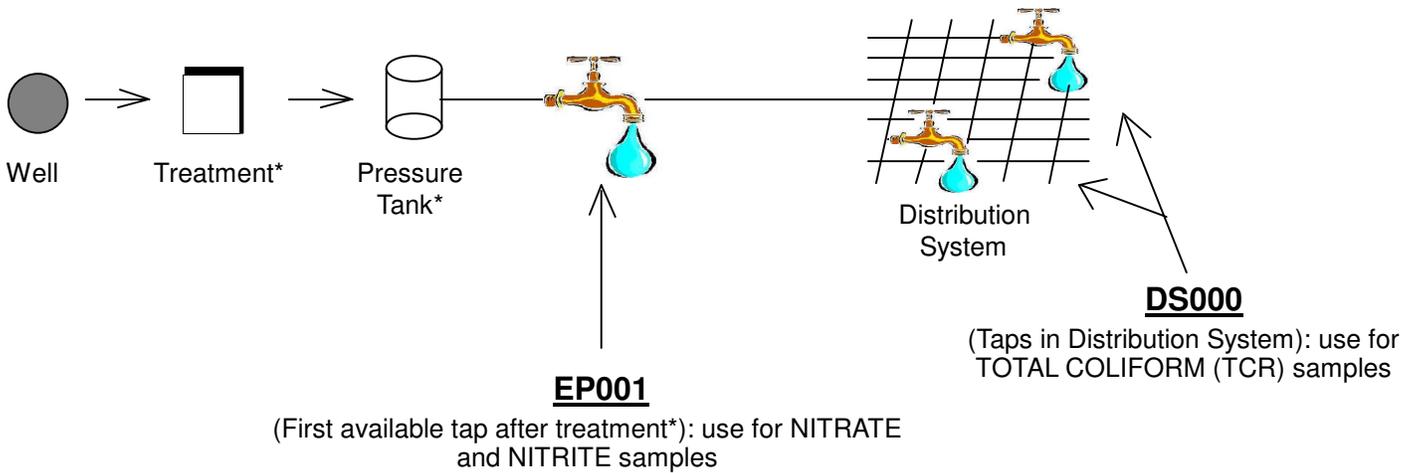

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436212 PWS NAME: MEADOWBROOK PARK CAMPGROUND 1

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458127 FACILITY NAME: MEADOWBROOK PK CMPGRND 1

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

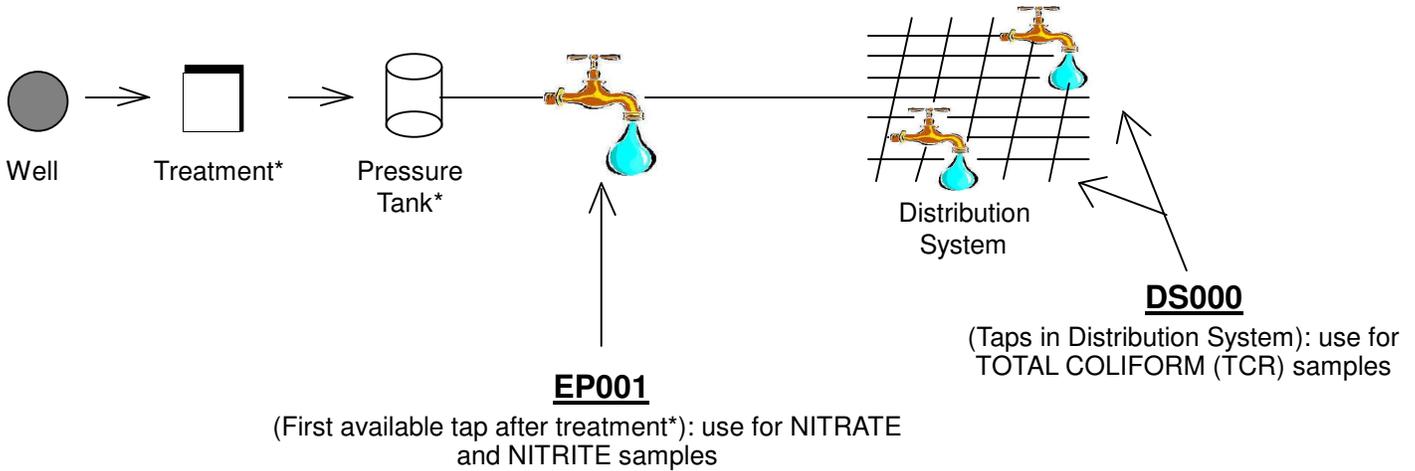

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436312 PWS NAME: MEADOWBROOK PARK CAMPGROUND 2

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458128 FACILITY NAME: MEADOWBROOK PK CMPGRND 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

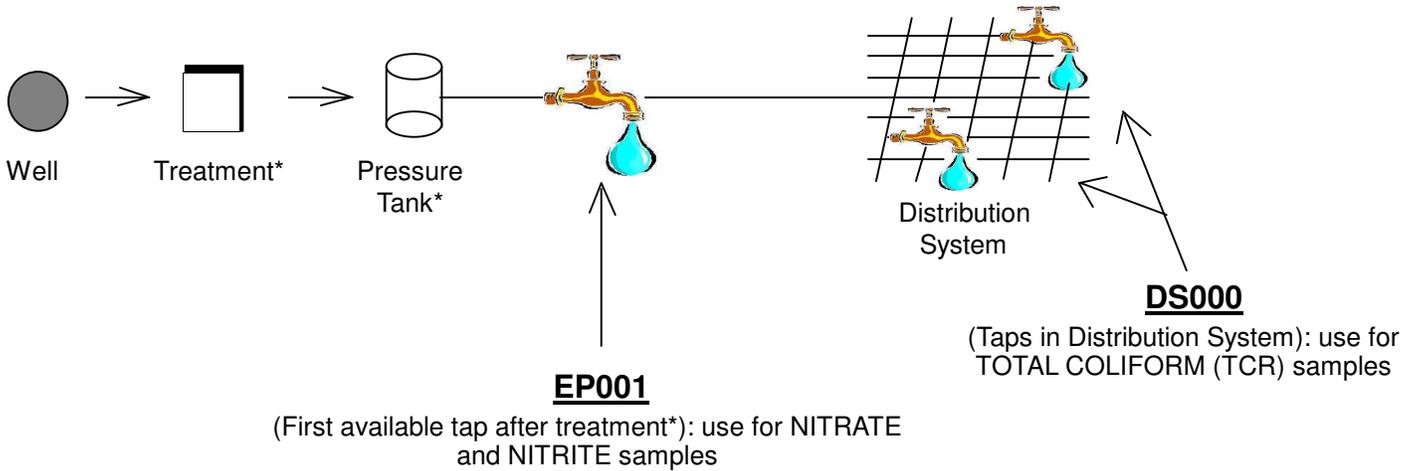

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436612 PWS NAME: MELMORE UNITED METHODIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458130 FACILITY NAME: MELMORE UNITED METH CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

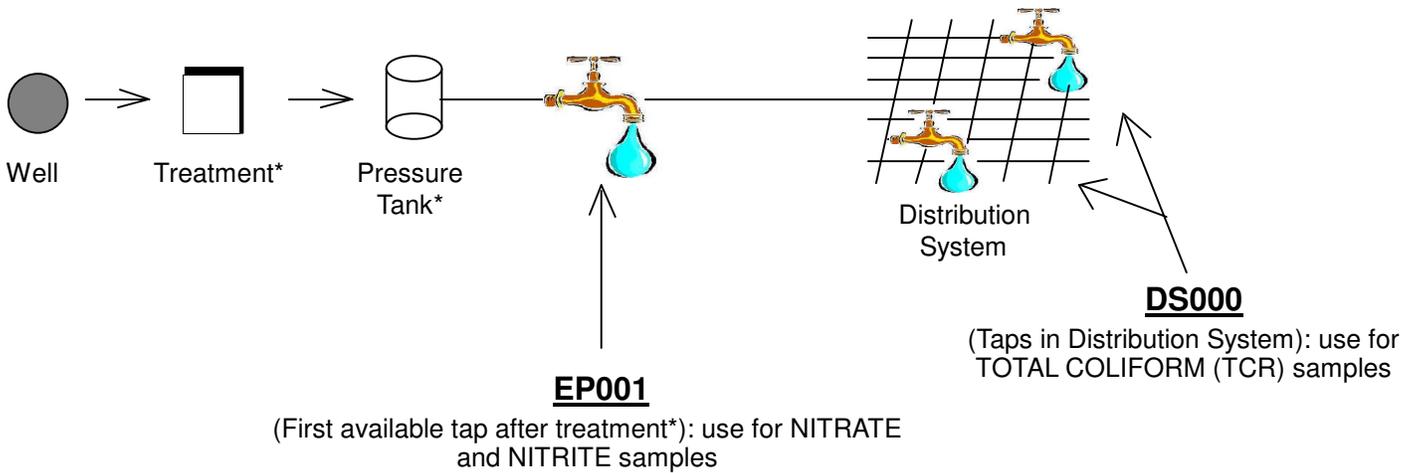

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436812 PWS NAME: MOHAWK GOLF AND COUNTRY CLUB, INC.

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458132 FACILITY NAME: MOHAWK GOLF AND COUNTRY CLUB INC

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

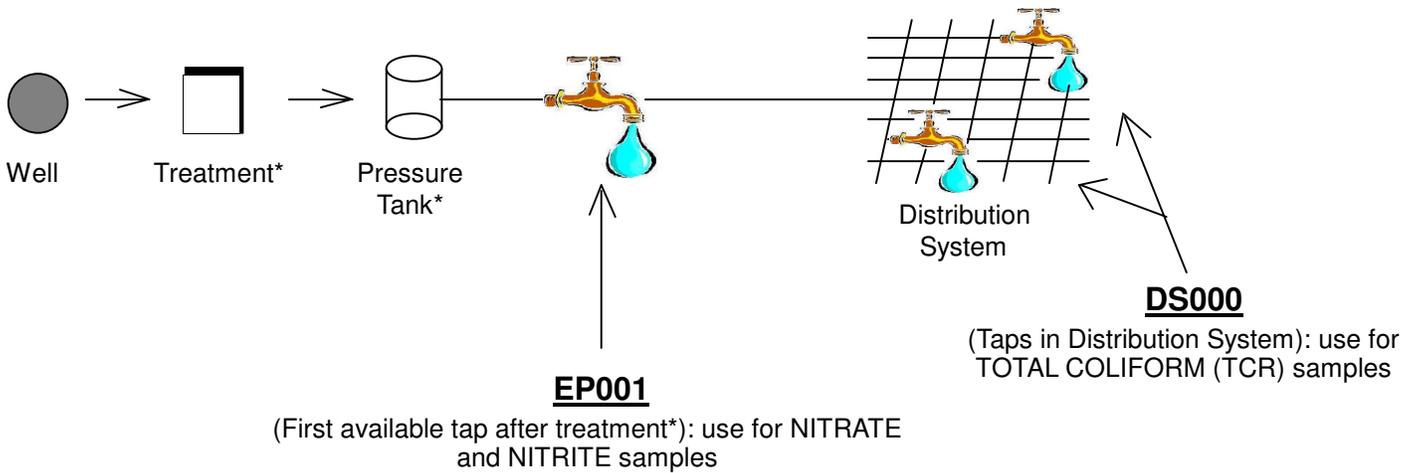

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7436912 PWS NAME: MOOSE LODGE 846
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458133 FACILITY NAME: MOOSE LODGE NO 846

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

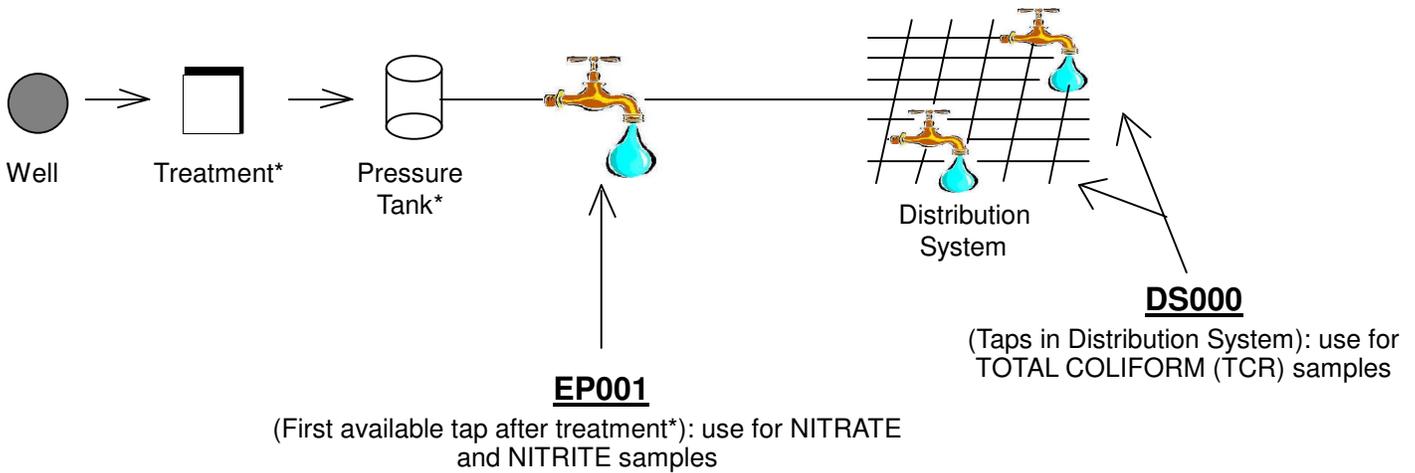

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7437012 PWS NAME: MOOSE LODGE 872
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458134 FACILITY NAME: MOOSE LODGE 872

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

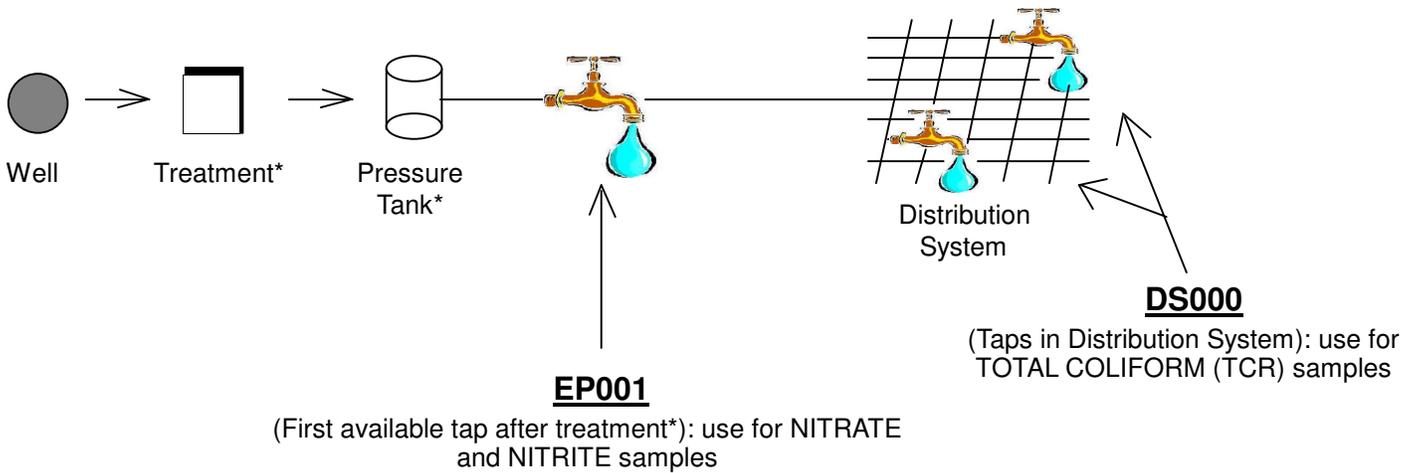

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7437212 PWS NAME: NATURE TRAILS GOLF COURSE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458135 FACILITY NAME: NATURE TRAILS GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

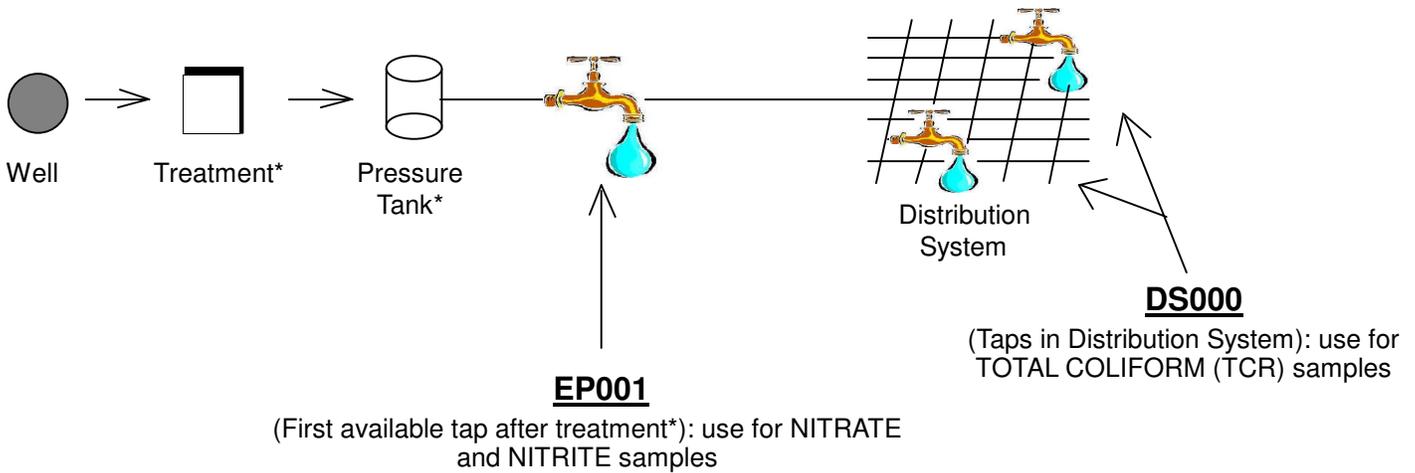

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7437312 PWS NAME: NEW RIEGEL CAFE
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458136 FACILITY NAME: NEW RIEGEL CAFE

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

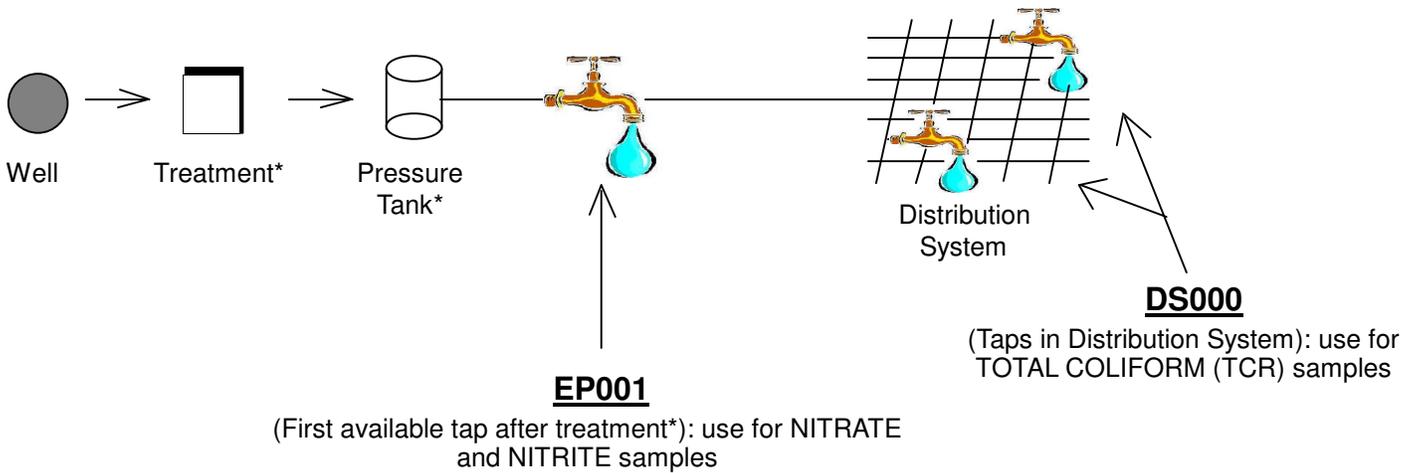

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7437512 PWS NAME: NEW RIEGEL LOCAL SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458138 FACILITY NAME: NEW RIEGEL LOCAL SCHOOL

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458138. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7437512 PWS NAME: NEW RIEGEL LOCAL SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: NEW RIEGEL LOCAL SCHOOL DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
TCR Quarterly Sample Date(s):	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7438512 PWS NAME: STEYER AMLC 3
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458139 FACILITY NAME: STEYER FARMS AMLC NO 3

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

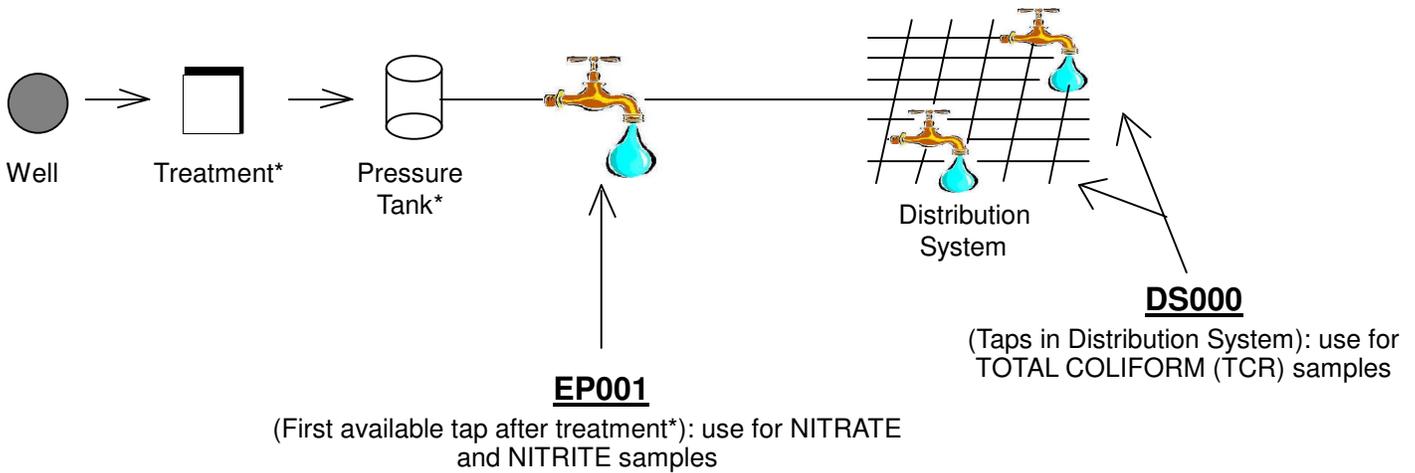

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7439812 PWS NAME: QUALITY INN
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458142 FACILITY NAME: QUALITY INN STU 1

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

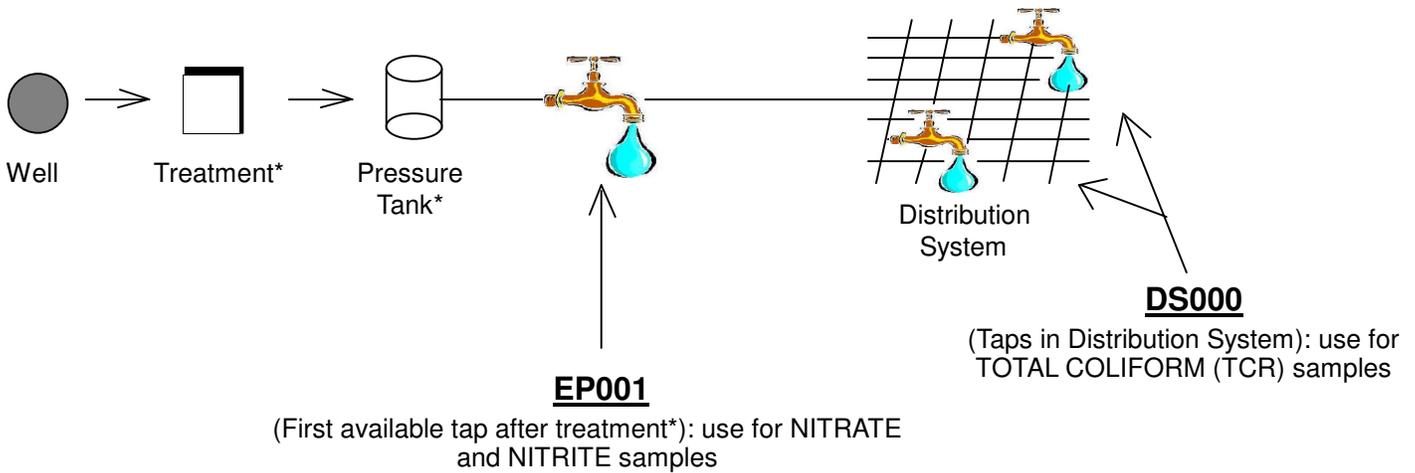

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes
Nitrate Sample Date(s):

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7439812 PWS NAME: QUALITY INN
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7460595 FACILITY NAME: QUALITY INN STU 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP002
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

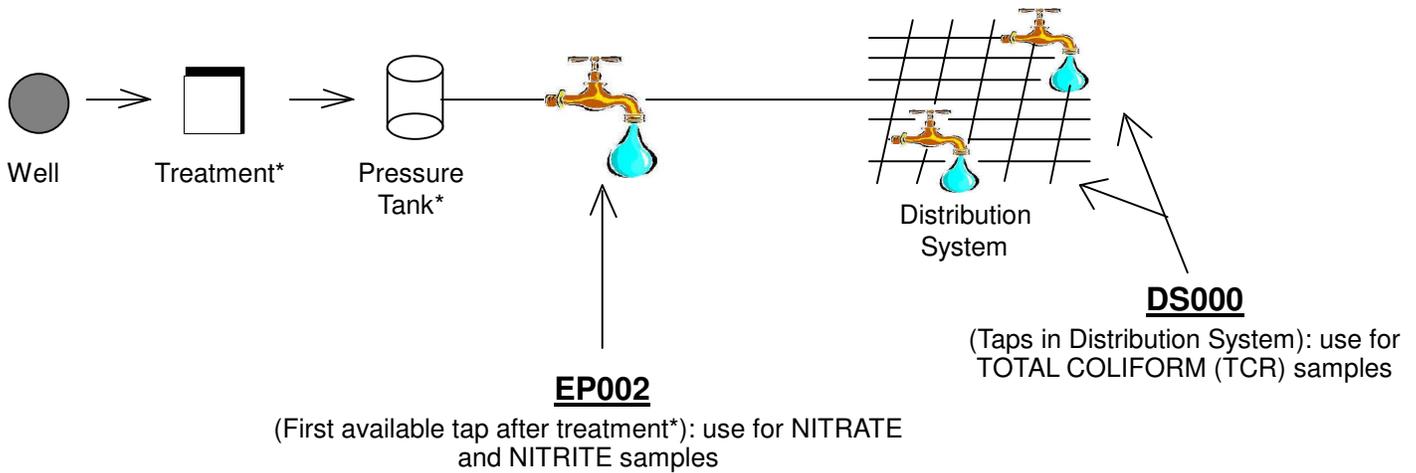

* If system does not have treatment, EP002 is the first tap after the well.

Use for Sample Tracking Purposes
Nitrate Sample Date(s):

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7441012 PWS NAME: SENECA HILLS GOLF COURSE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458146 FACILITY NAME: SENECA HILLS GOLF COURSE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

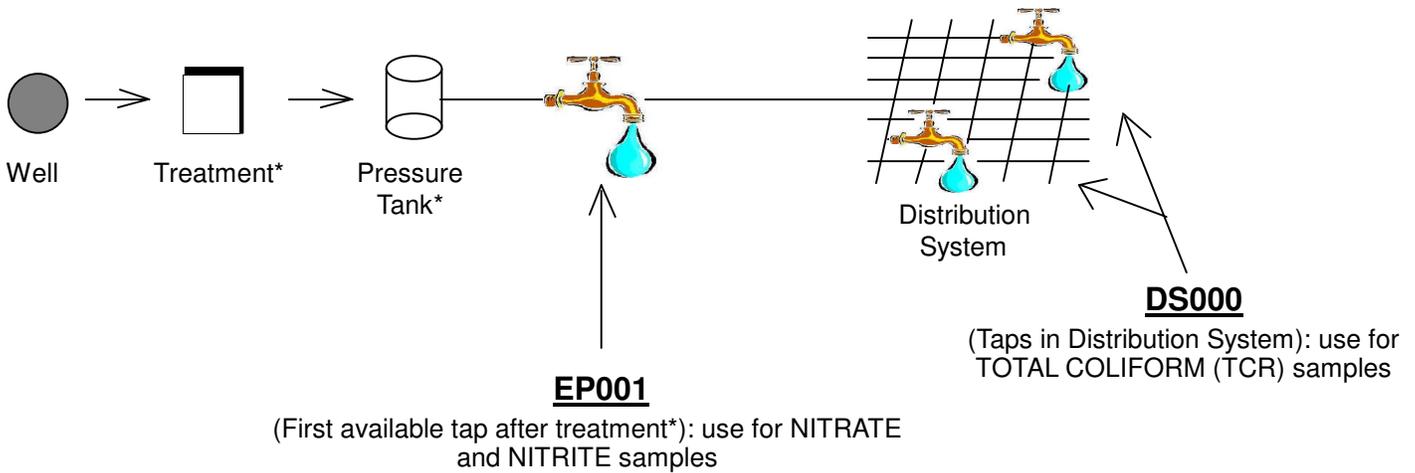

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7441612 PWS NAME: ST ANDREWS CHURCH
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458149 FACILITY NAME: SAINT ANDREWS CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

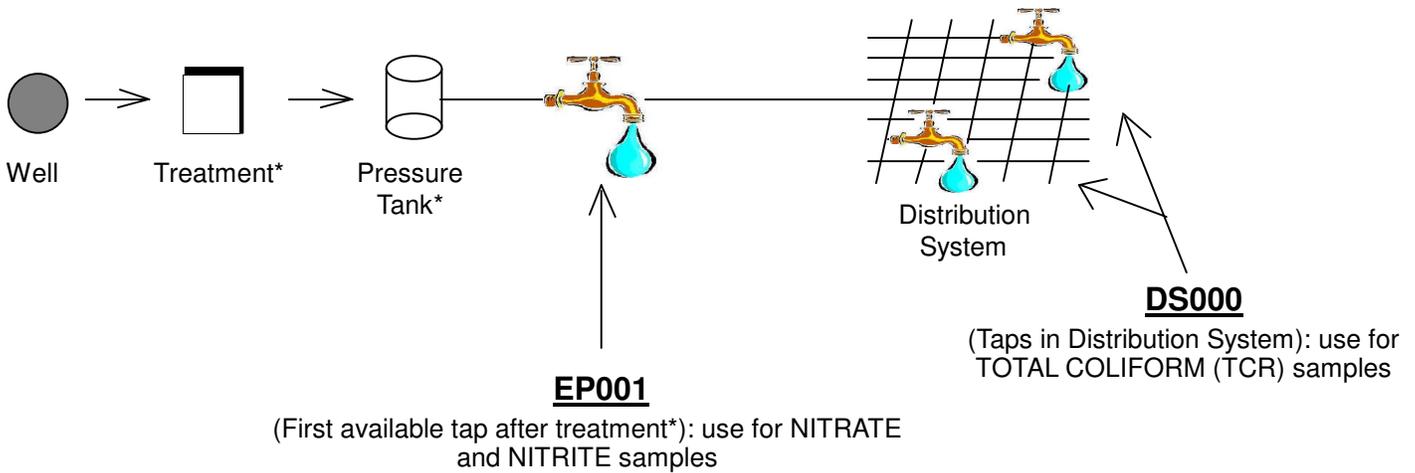

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7441712 PWS NAME: ALL SAINTS CATHOLIC CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458150 FACILITY NAME: ALL SAINTS CATHOLIC CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

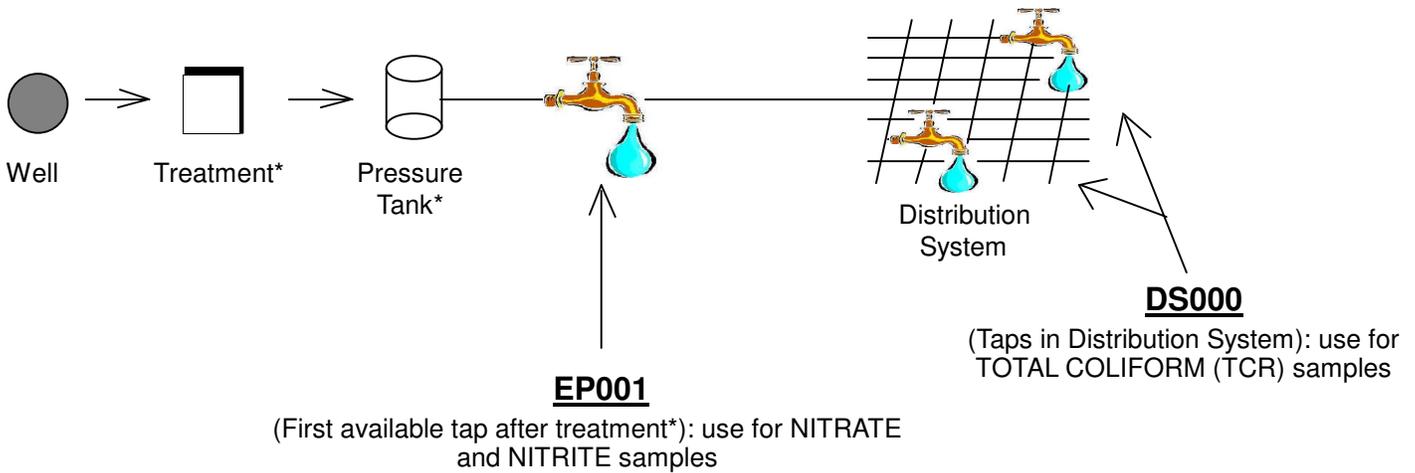

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7442212 PWS NAME: STEYER AMLC 1
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458151 FACILITY NAME: STEYER AMLC NO 1

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

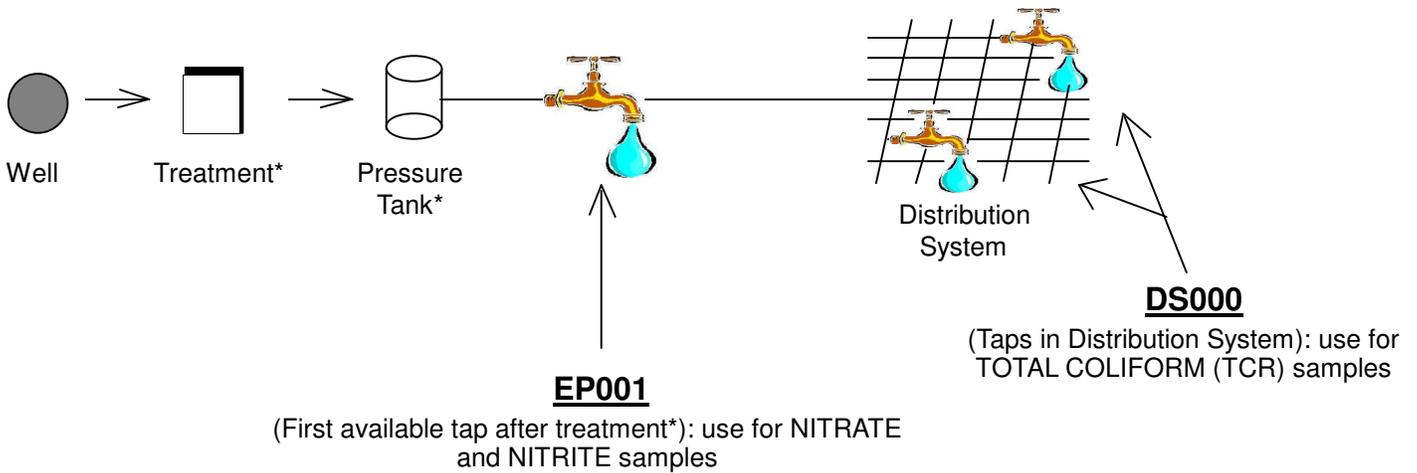

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7443012 PWS NAME: TIFFIN DRIVE-IN THEATER

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458154 FACILITY NAME: TIFFIN DRIVE-IN THEATER

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

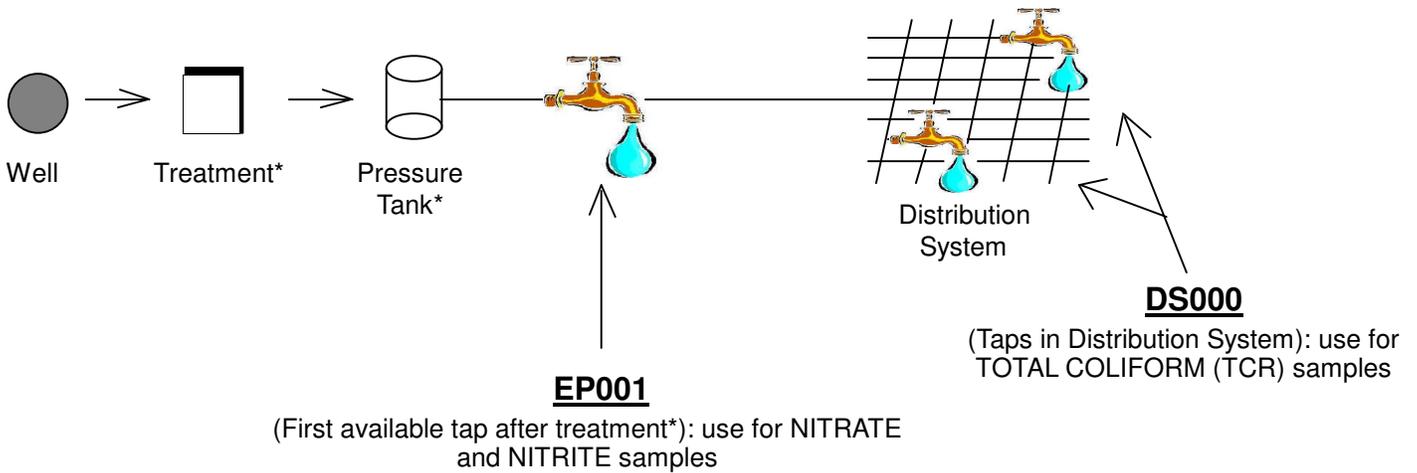

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7443412 PWS NAME: THE CORNER RESTAURANT

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458156 FACILITY NAME: THE CORNER RESTAURANT

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

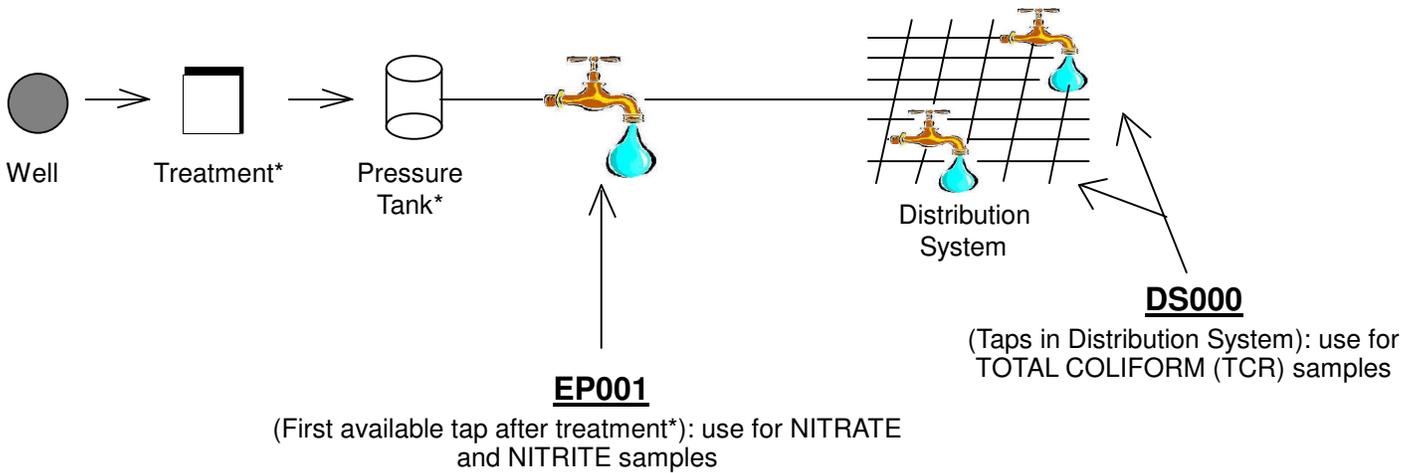

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7443612 PWS NAME: BASCOM UNITED METHODIST CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458158 FACILITY NAME: BASCOM UN METH CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

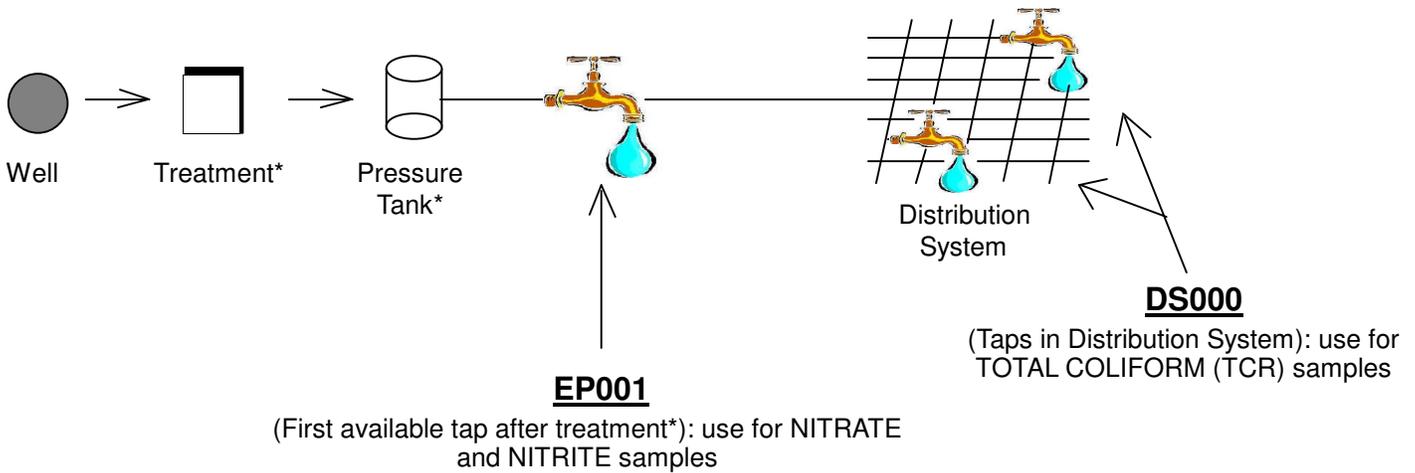

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7444012 PWS NAME: WALNUT GROVE CAMPGROUND NO 1

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458159 FACILITY NAME: WALNUT GROVE CAMPGROUND

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

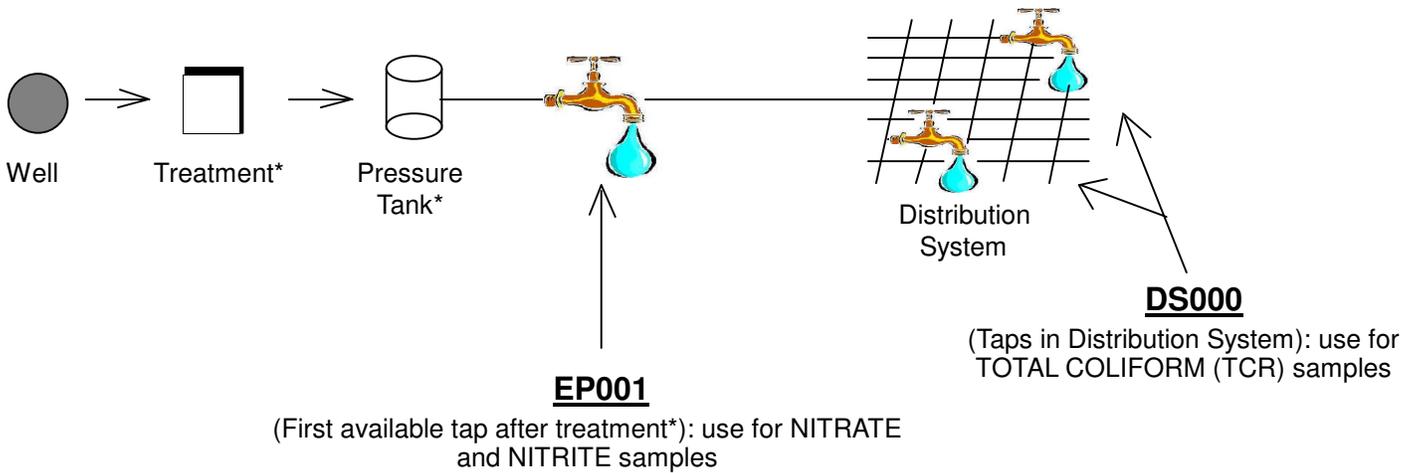

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7445212 PWS NAME: OLD FORT HIGH SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458162 FACILITY NAME: OLD FORT HIGH SCHOOL

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458162. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7445212 PWS NAME: OLD FORT HIGH SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: OLD FORT HIGH SCHOOL DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7445312 PWS NAME: OLD FORT ELEMENTARY SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458163 FACILITY NAME: OLD FORT ELEM SCHOOL

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458163. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7445312 PWS NAME: OLD FORT ELEMENTARY SCHOOL

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: OLD FORT ELEM. SCHOOL DISTRIBUTION

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7445812 PWS NAME: MEADOWBROOK PARK-POOL

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458167 FACILITY NAME: MEADOWBROOK PARK POOL

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

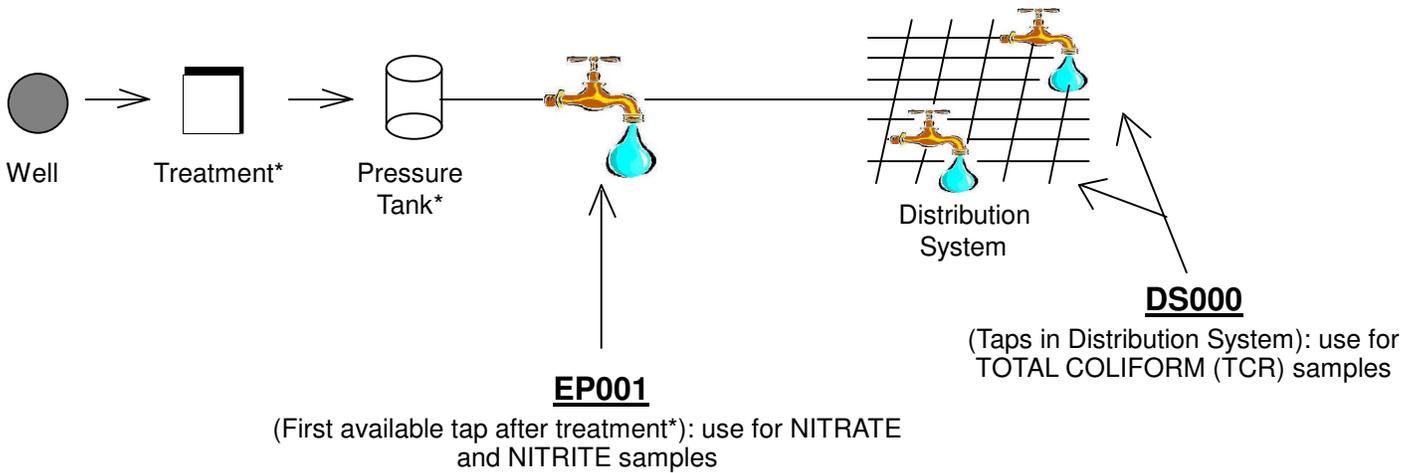

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7446712 PWS NAME: STEYER AMLC 2
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458173 FACILITY NAME: STEYER AMLC NO 2

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

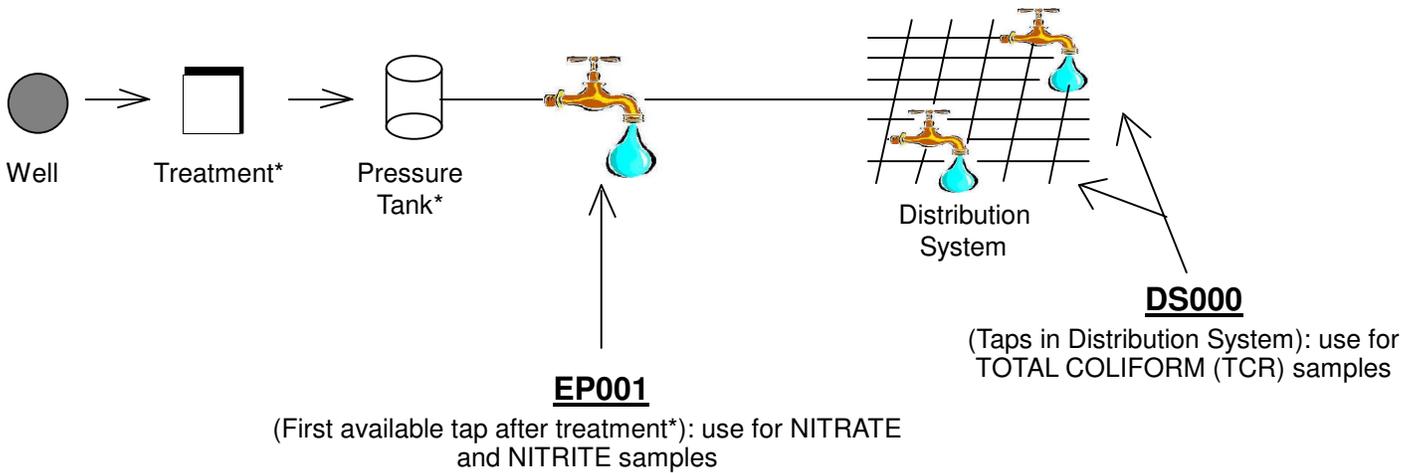

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7446812 PWS NAME: VEL-A-DA AMLC 1
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458174 FACILITY NAME: VEL-A-DA AMLC NO 1

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 7/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

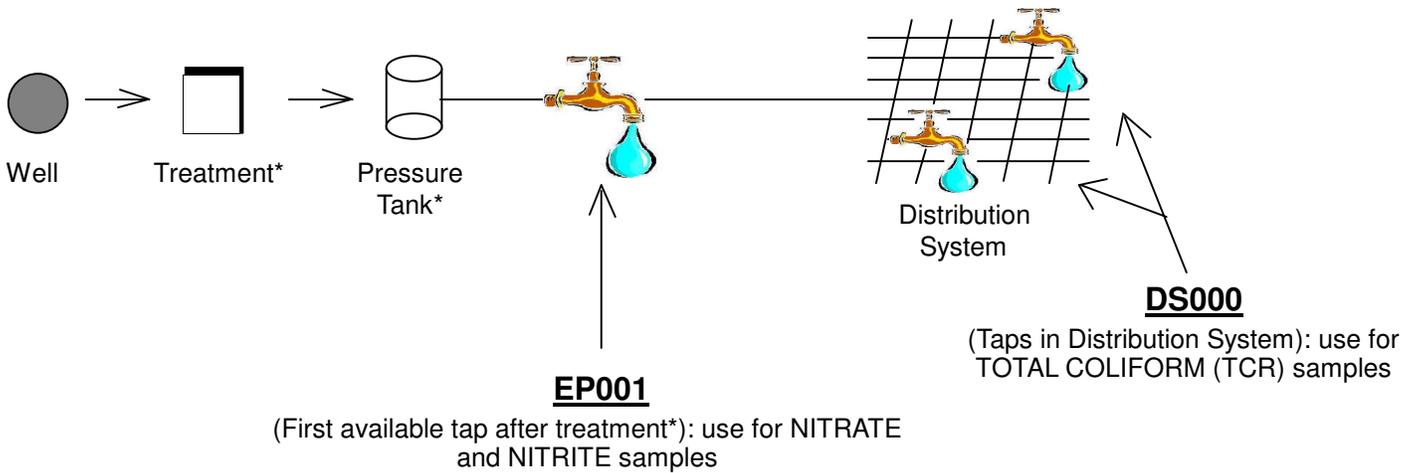

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447312 PWS NAME: FIRST CHRISTIAN CHURCH

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458178 FACILITY NAME: FIRST CHRISTIAN CHURCH

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

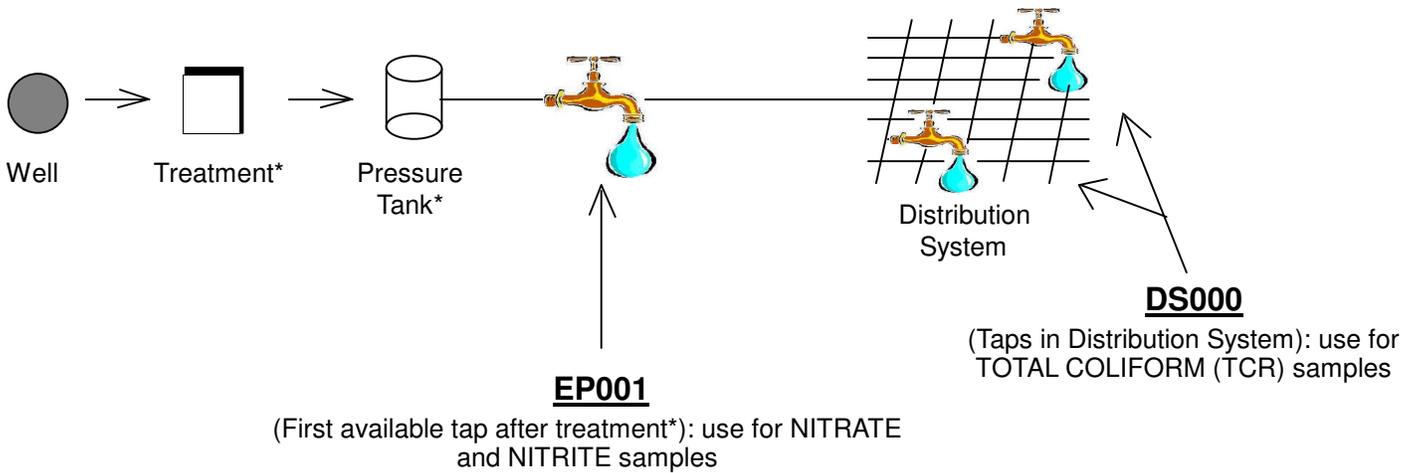

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447412 PWS NAME: MICHAEL G SCHERER DO
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458179 FACILITY NAME: MICHAEL G SCHERER DO

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

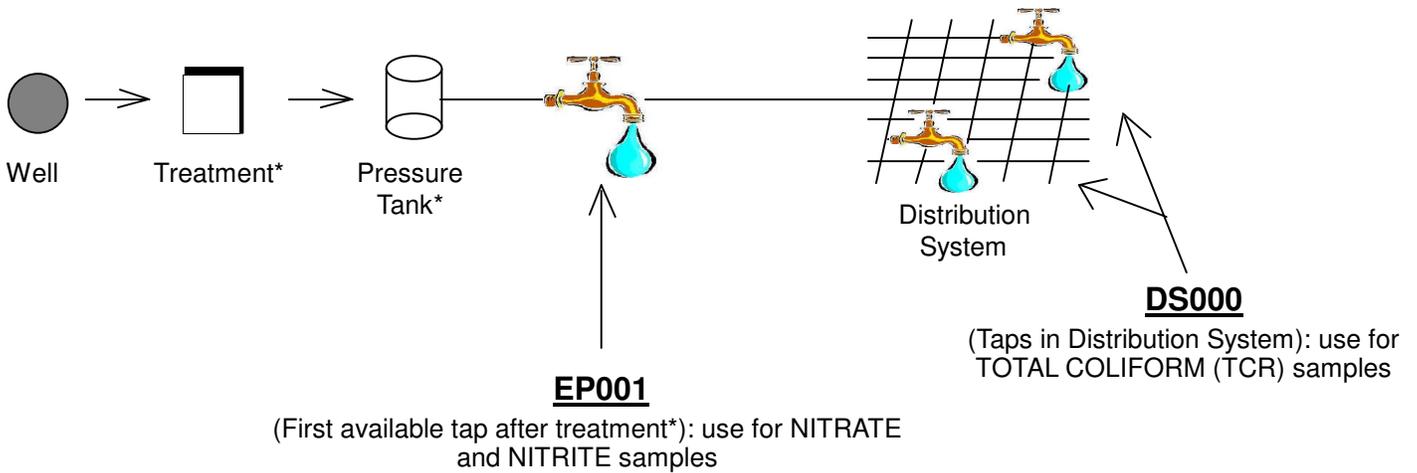

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447612 PWS NAME: THOMPSON BIBLE INSTITUTE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458181 FACILITY NAME: THOMPSON BIBLE INSTITUTE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

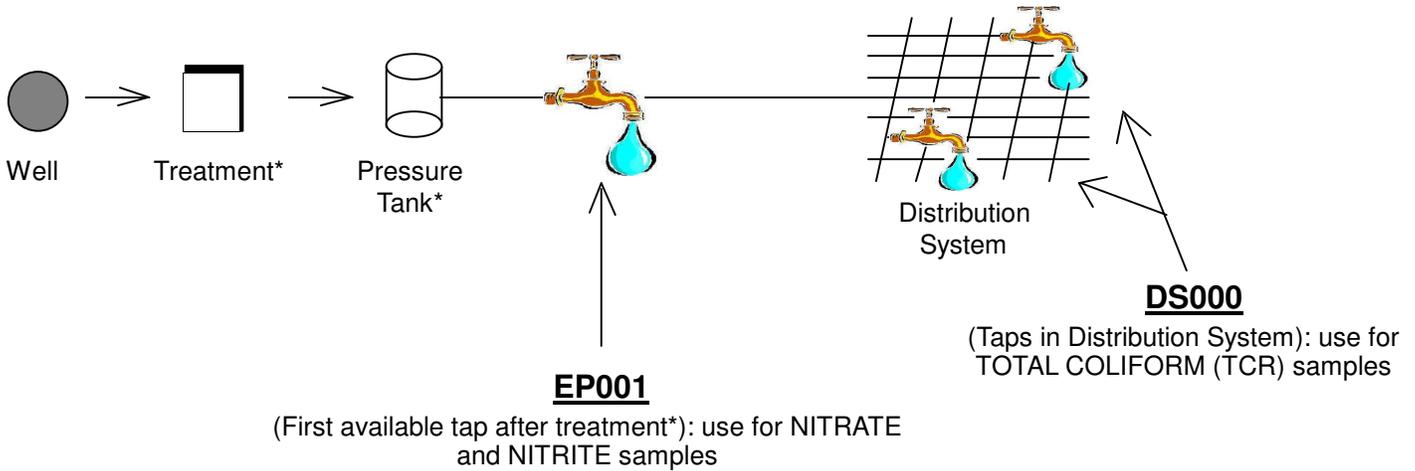

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447712 PWS NAME: WEBER HALL

PWS TYPE: **Transient Noncommunity** SOURCE: **Ground Water**
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458182 FACILITY NAME: WEBER HALL

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

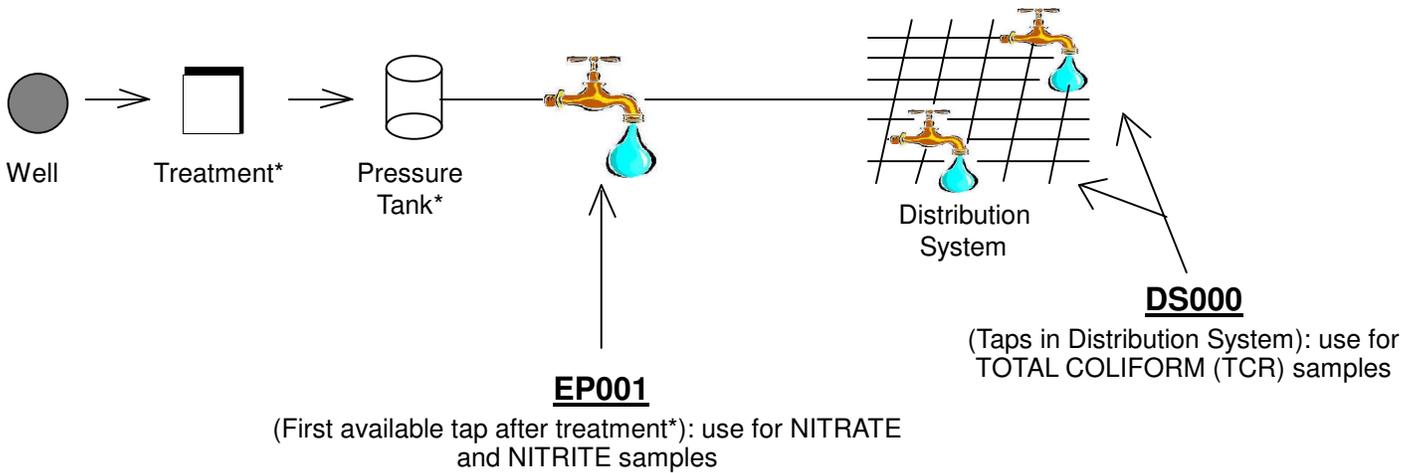

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447812 PWS NAME: I C TREATS
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458183 FACILITY NAME: IC TREATS

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 9/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

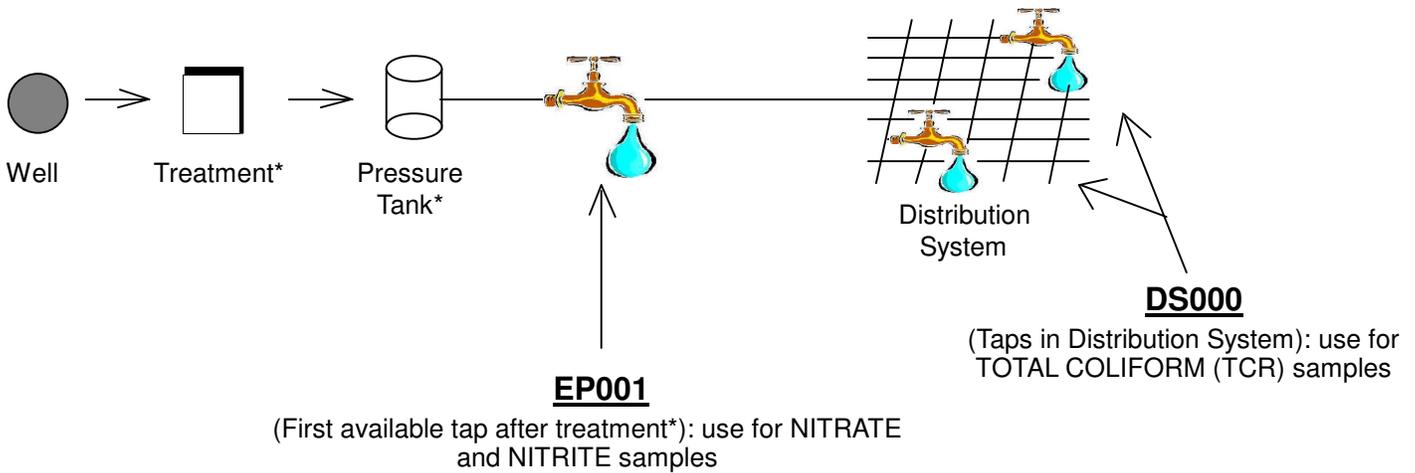

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7447912 PWS NAME: MEADOWBROOK PARK-BALLROOM

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458184 FACILITY NAME: MEADOWBROOK PK BALLROOM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

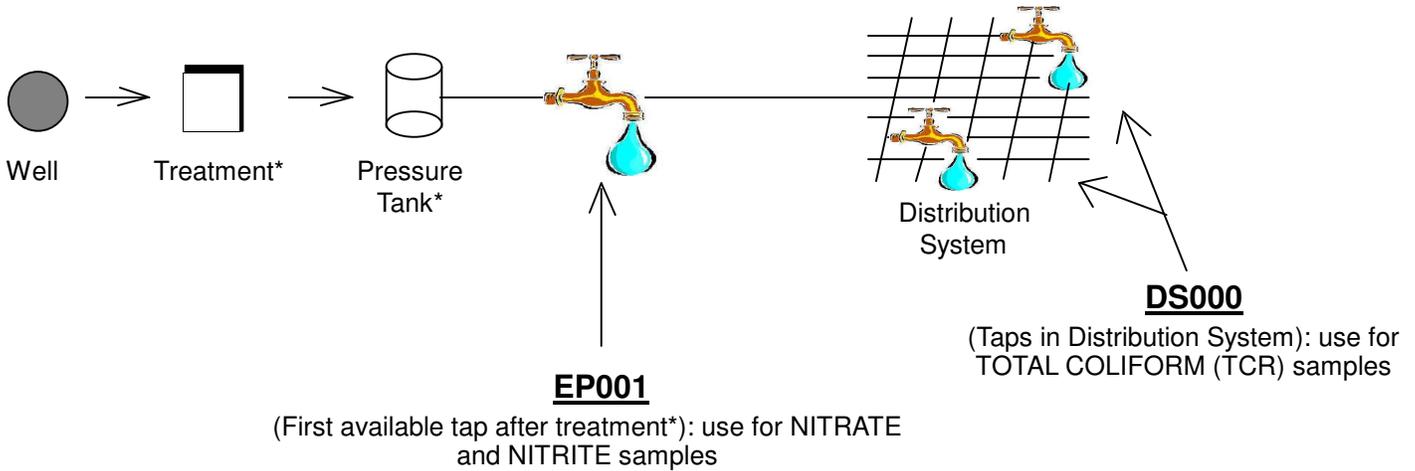

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448312 PWS NAME: HOPEWELL-LOUDON ATHLETIC COMPLEX

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458186 FACILITY NAME: HOPEWELL-LOUDEN ATH CMPX

Chemicals	Monitoring Requirements	Sample Monitoring Point
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

Chemicals	Monitoring Requirements	Sample Monitoring Point
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 4/1/2011 and 11/30/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

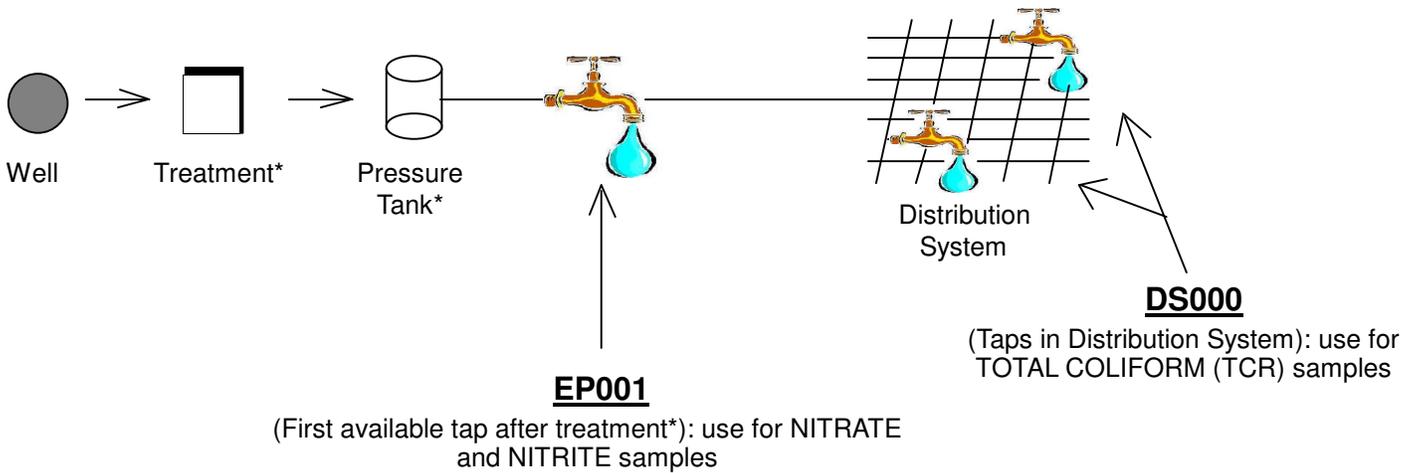

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448412 PWS NAME: PJS BRICKHOUSE CORP PWS

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458187 FACILITY NAME: PJS BRICKHOUSE CORP

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

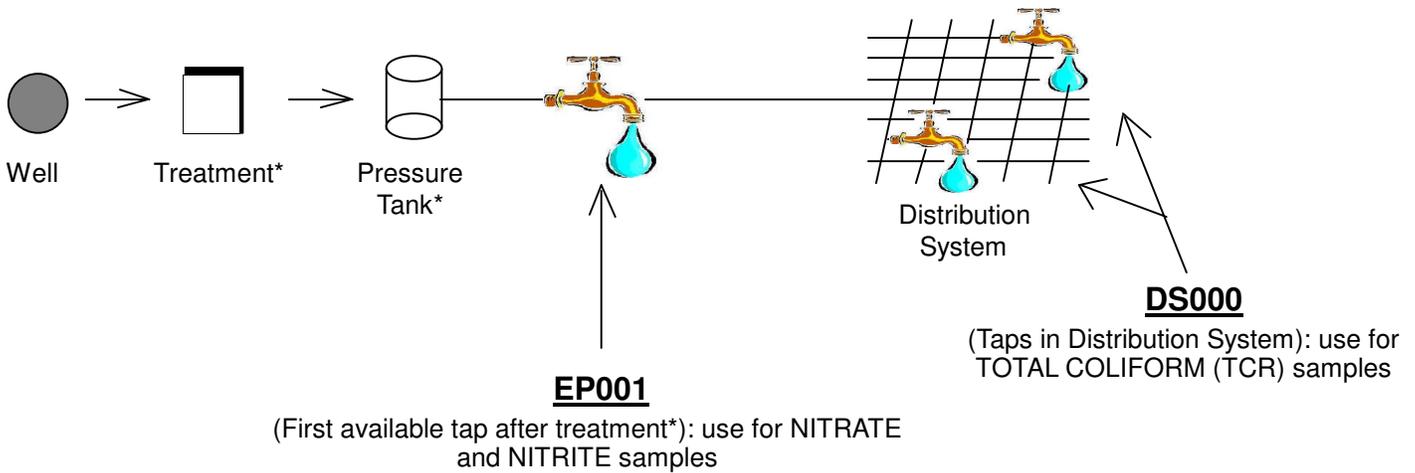

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448512 PWS NAME: WALNUT GROVE CAMPGROUND NO 2

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458188 FACILITY NAME: WALNUT GROVE CAMPGROUND NO 2

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

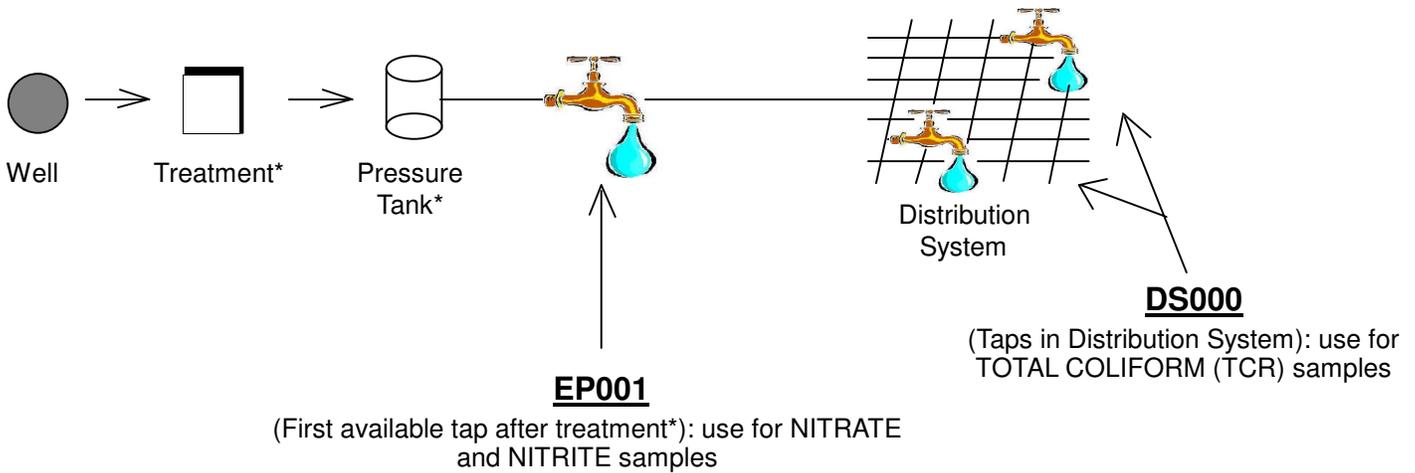

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448612 PWS NAME: WALNUT GROVE CAMPGROUND NO 3

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458189 FACILITY NAME: WALNUT GROVE CAMPGROUND NO 3

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 5/1/2011 and 10/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

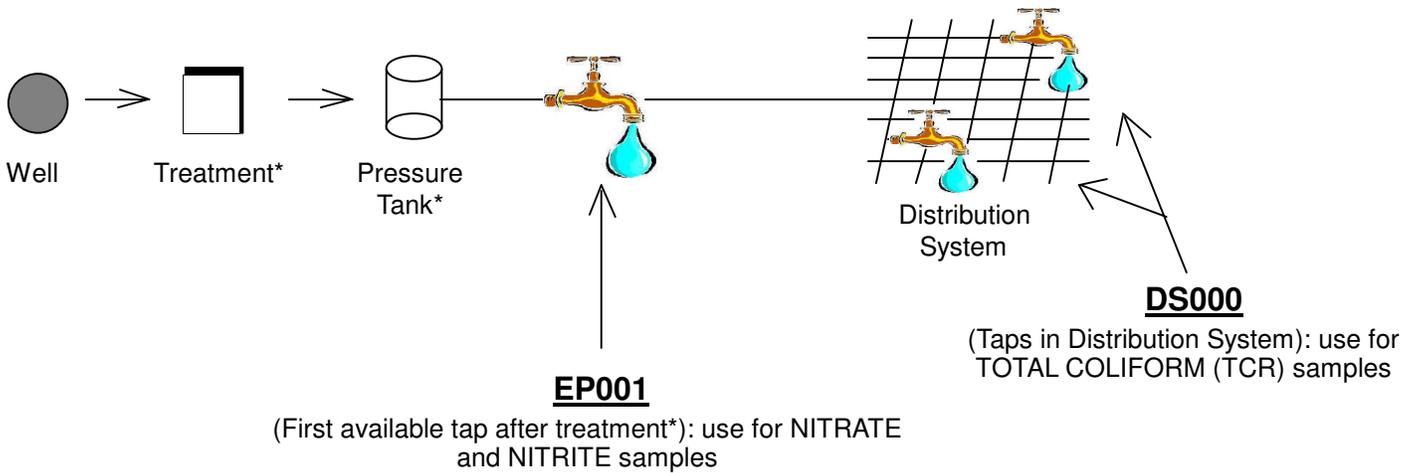

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7448712 PWS NAME: FOSTORIA MIXING CENTER

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7458190 FACILITY NAME: FOSTORIA MIXING CENTER

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 1/1/2011 and 5/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7458190. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):
VOC Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7448712 PWS NAME: FOSTORIA MIXING CENTER

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: FOSTORIA MIXING CENTER DIST

Groundwater Rule Substantial Treatment System

Effective Date: 3/10/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) between 7/1/2011 and 9/30/2011
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
Lead & Copper Sample Date(s):				
HAA5 & TTHM Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)
Total Chlorine Sample Date(s):				

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448812 PWS NAME: LINDSEY-OLDS FUNERAL HOME

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458191 FACILITY NAME: LINDSEY OLDS FUNERAL HOME

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

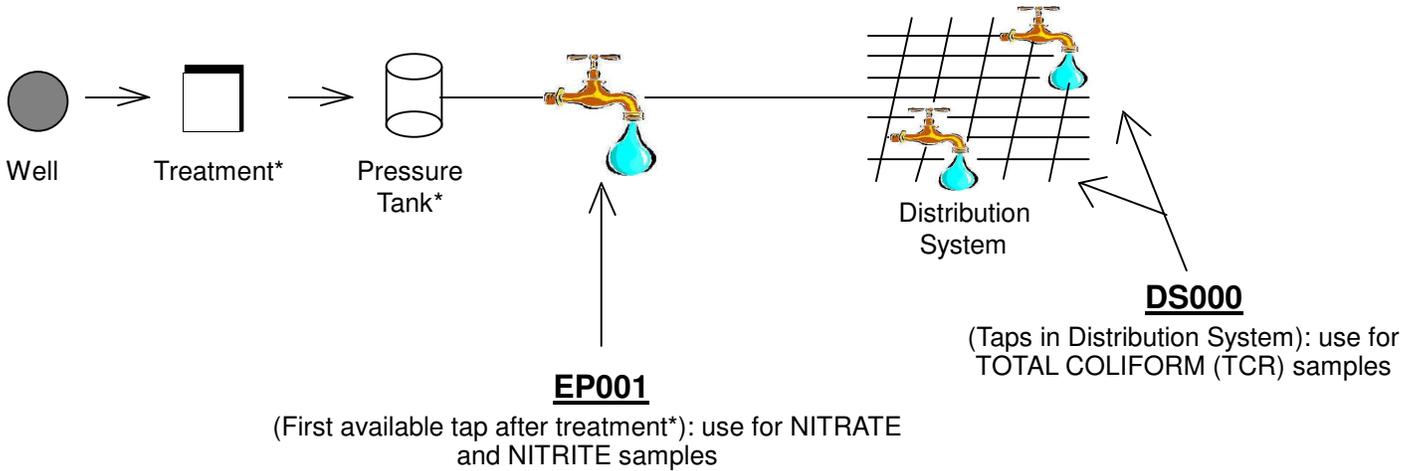

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7448912 PWS NAME: BUBBYS PIZZARIA AND MORE

PWS TYPE: Transient Noncommunity SOURCE: Ground Water

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7458192 FACILITY NAME: BUBBYS PIZZARIA & MORE

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

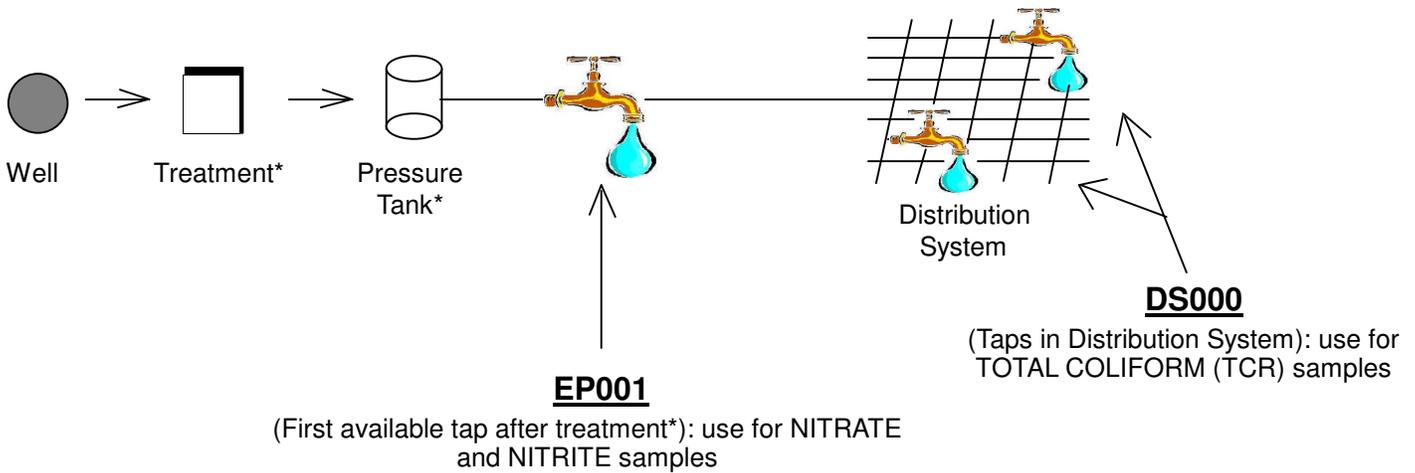

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7449112 PWS NAME: **CAMP GLEN**
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7460834 FACILITY NAME: CAMP GLEN

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

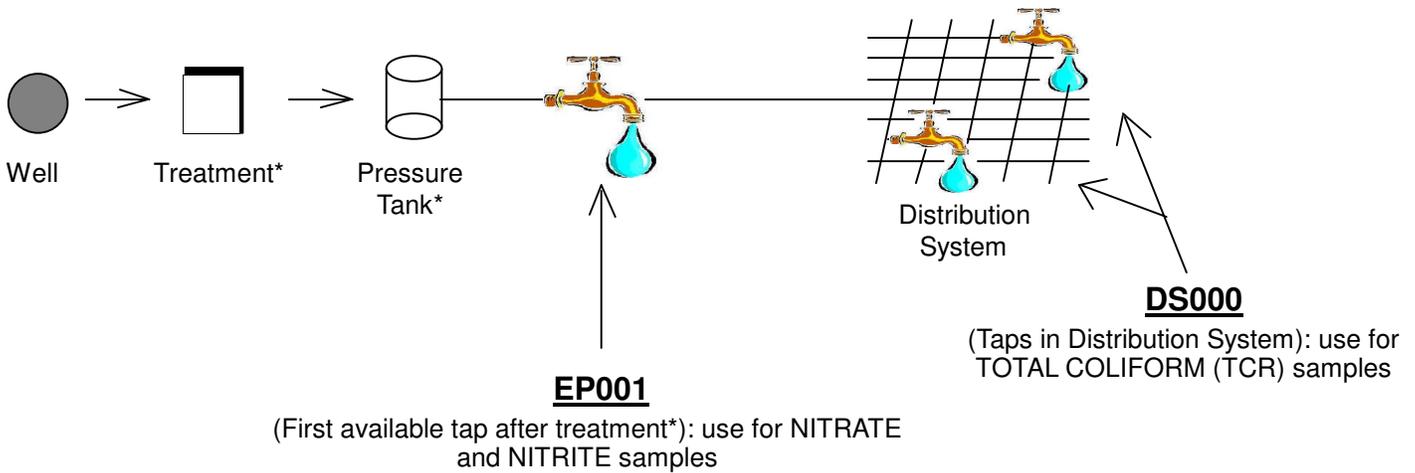

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes
Nitrate Sample Date(s):

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7449212 PWS NAME: ALVADA CONSTRUCTION COMPLEX

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7460886 FACILITY NAME: ALVADA CONSTRUCTION COMPLEX

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 10/1/2011 and 12/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7460886. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):
VOC Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7449212 PWS NAME: ALVADA CONSTRUCTION COMPLEX

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000

FACILITY NAME: ALVADA CONSTRUCTION COMPLEX

Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	5 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** Not Required, Unless State Delinquency Notice Received
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes				
<i>Lead & Copper Sample Date(s):</i>				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CONTAMINANT MONITORING SCHEDULE

PWS ID: OH7449312 PWS NAME: US 23 AND 224 PLAZA
PWS TYPE: Transient Noncommunity SOURCE: Ground Water
Groundwater Rule Substantial Treatment System

Effective Date: 1/1/11

THIS SCHEDULE DOES NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378


STATE FACILITY ID: 7460887 FACILITY NAME: US 23 AND 224 PLAZA

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011	Sample should be taken at EP001
NITRITE - 1041	Not Required	

STATE FACILITY ID: DS1 FACILITY NAME: DISTRIBUTION SYSTEM

<i>Chemicals</i>	<i>Monitoring Requirements</i>	<i>Sample Monitoring Point</i>
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011	Sample should be taken at DS000

Where to Collect Samples For a Small Public Water System

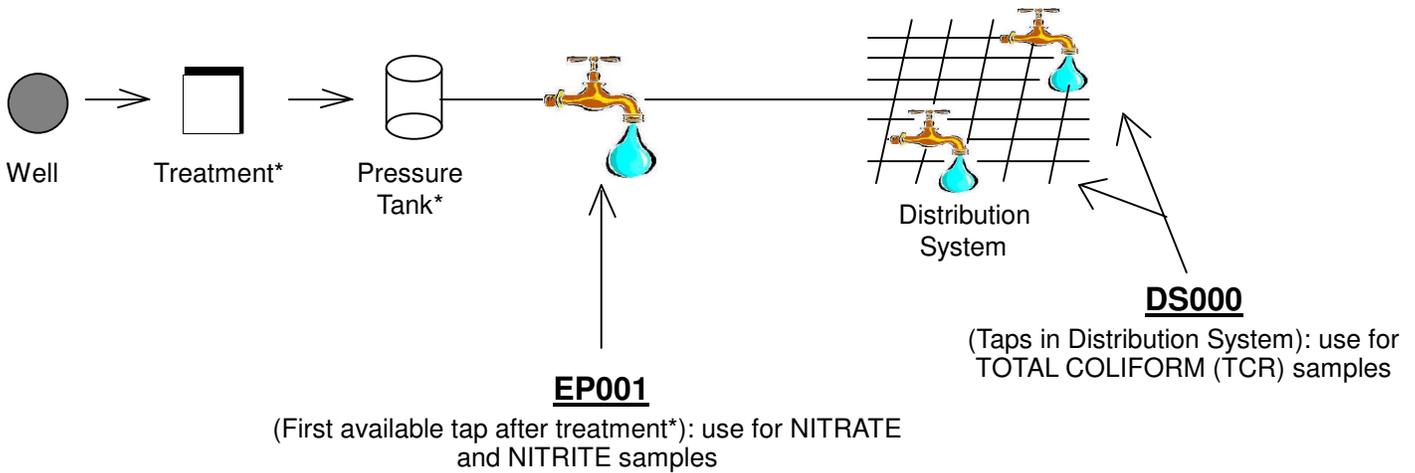

* If system does not have treatment, EP001 is the first tap after the well.

Use for Sample Tracking Purposes				
Nitrate Sample Date(s):				
TCR Quarterly Sample Date(s):	Jan - Mar Sample Date(s)	Apr - Jun Sample Date(s)	Jul - Sept Sample Date(s)	Oct - Dec Sample Date(s)

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7449412 PWS NAME: PALFINGER/TIFFIN LOADER CRANE PWS

PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7461165 FACILITY NAME: PALFINGER/TIFFIN LOADER CRANE

Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	Not Required
NITRATE	NITRATE - 1040	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRITE	NITRITE - 1041	Not Required
VOLATILE ORGANIC CHEMICALS (VOC)		Not Required
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	Not Required

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7461165. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes
NITRATE Sample Date(s):

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7449412 PWS NAME: PALFINGER/TIFFIN LOADER CRANE PWS
PWS TYPE: Nontransient Noncommunity SOURCE: Ground Water Sample Monitoring Point: DS000
FACILITY NAME: PALFINGER/TIFFIN LOADER CRANE DISTRIBUTI
Groundwater Rule Minimal Treatment System

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
LEAD - 1030 & COPPER - 1022	Not Required
TOTAL COLIFORM (TCR) - 3100	1 Sample(s) Quarterly between 1/1/2011 and 12/31/2011

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

Use for Sample Tracking Purposes				
<i>TCR Quarterly Sample Date(s):</i>	<i>Jan - Mar Sample Date(s)</i>	<i>Apr - Jun Sample Date(s)</i>	<i>Jul - Sept Sample Date(s)</i>	<i>Oct - Dec Sample Date(s)</i>

2011 CHEMICAL MONITORING ENTRY POINT SCHEDULE

PWS ID: OH7400011 PWS NAME: ATTICA VILLAGE

PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: EP001

STATE FACILITY ID: 7462192 FACILITY NAME: ATTICA VILLAGE

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemicals	Chemical Name - Code	Monitoring Requirements
INORGANICS	See Inorganic Chemical List Below	1 Sample(s) between 6/1/2011 and 10/31/2011
NITRATE	NITRATE - 1040	1 Sample(s) Monthly
NITRITE	NITRITE - 1041	Not Required
RADIOLOGICALS	GROSS ALPHA - 4002, RADIUM 228 - 4030	Not Required
TOTAL ORGANIC CARBON (TOC)		1 Paired Sample Set Monthly *
VOLATILE ORGANIC CHEMICALS (VOC)		1 Sample(s) between 6/1/2011 and 10/31/2011
SYNTHETIC ORGANIC CHEMICALS (SOC)	See SOC Group 1 List Below	1 Sample(s) between 4/1/2011 and 4/30/2011 1 Sample(s) between 5/1/2011 and 5/31/2011 1 Sample(s) between 6/1/2011 and 6/30/2011

Unless Otherwise Noted, the Sample Monitoring Point for All Chemicals Listed Above is EP001 and the State Facility ID is 7462192. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

REMINDER: Consumer Confidence Report (CCR) is due July 1, 2011

INORGANIC Chemicals: ANTIMONY - 1074, ARSENIC - 1005, BARIUM - 1010, BERYLLIUM - 1075, CADMIUM - 1015, CHROMIUM - 1020, CYANIDE - 1024, FLUORIDE - 1025, MERCURY - 1035, NICKEL - 1036, SELENIUM - 1045, THALLIUM - 1085

Paired Sample Set: * A paired sample set refers to one source water and one treated water sample. A source water alkalinity is also required at the same time the TOC sample is taken

SOC Group 1 Chemicals: SIMAZINE - 2037, ATRAZINE - 2050, ALACHLOR (LASSO) - 2051

Use for Sample Tracking Purposes												
<i>INORGANIC Sample Date(s):</i>												
<i>NITRATE Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>TOC Monthly Sample Date(s):</i>	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>
<i>VOC Sample Date(s):</i>												
<i>SOC Group 1 Sample Date(s):</i>												
<i>Date CCR sent to Ohio EPA:</i>												

2011 CONTAMINANT MONITORING DISTRIBUTION POINT SCHEDULE

PWS ID: OH7400011 PWS NAME: ATTICA VILLAGE
PWS TYPE: Community SOURCE: Surface Water Sample Monitoring Point: DS000
FACILITY NAME: ATTICA VILLAGE DISTRIBUTION

Effective Date: 1/1/11

THIS SCHEDULE MAY NOT INCLUDE ALL MONITORING REQUIREMENTS FOR YOUR SYSTEM.

Contact your district office to review additional monitoring for coliform, monthly operating parameters, and/or other monitoring requirements not included on this schedule. For water emergencies that occur after hours, please call 800-282-9378

Chemical Name - Code	Monitoring Requirements
ASBESTOS - 1094	Not Required
LEAD - 1030 & COPPER - 1022	10 Sample(s) between 6/1/2011 and 9/30/2011
TOTAL HALOACETIC ACIDS (HAA5) - 2456 and TOTAL TRIHALOMETHANES (TTHM) - 2950	** 1 Sample(s) Quarterly
TOTAL COLIFORM (TCR) - 3100	4 Sample(s) Monthly between 1/1/2011 and 12/31/2011
TOTAL CHLORINE - 1000	*** Sample in the Distribution System

For All Chemicals and Total Coliform Requirements Listed Above, the State Facility ID is DS1. The Sample Monitoring Point Codes for TTHM and HAA5 Samples are MR000/RD000, and DS000 for Asbestos Samples. This Information Must Be Provided to the Laboratory for Results to be Submitted to Ohio EPA.

Lead Consumer Notice needs issued to sampling participants within thirty days of receipt of results and verification submitted to Ohio EPA within ninety days from the end of the monitoring period.

** Total Haloacetic Acids (HAA5) and Total Trihalomethanes (TTHM) Sampling Information (Disinfection Byproducts)

HAA5 and TTHM are part of a large group of chemicals known as disinfection byproducts. These samples should be collected from point(s) in the distribution system where the water age is the oldest. Use MR000 as the sample monitoring point. If your system is also required to collect HAA5 and TTHM samples from other locations in your distribution system, use RD000 as the sample monitoring point.

Questions concerning HAA5 and TTHM monitoring can be directed to Ohio EPA DDAGW Central Office at (614) 644-2752. Your district office representative is also available to provide assistance.

Asbestos Sampling Information

Collect one sample at a tap served by asbestos-cement pipe. The sample monitoring point (smp) code is DS000. Due to limited Laboratory capacity and a 48 hour filtering requirement, contact your lab early in the monitoring period to schedule a sampling date.

TOTAL COLIFORM (TCR) Sampling Information

PLEASE NOTE: Total Coliform Positive samples will increase your Total Coliform monitoring requirements beyond what is included in this schedule. *Monitoring will be at least temporarily increased to include 4 Repeat Samples to be taken immediately and 5 Routine Samples the next month.* If you receive a Total Coliform Positive result, contact your Northwest District Office - DDAGW representative immediately at 419-352-8461.

*** TOTAL CHLORINE Sampling Information

Total Chlorine samples are collected in the distribution system at the same time and place as Total Coliforms are sampled.

Use for Sample Tracking Purposes													
<i>Lead & Copper Sample Date(s):</i>													
<i>HAA5 & TTHM Quarterly Sample Date(s):</i>			<i>Jan - Mar Sample Date(s)</i>			<i>Apr - Jun Sample Date(s)</i>			<i>Jul - Sept Sample Date(s)</i>			<i>Oct - Dec Sample Date(s)</i>	
<i>TCR Monthly Sample Date(s):</i>													
	<i>Jan</i>	<i>Feb</i>	<i>Mar</i>	<i>Apr</i>	<i>May</i>	<i>Jun</i>	<i>Jul</i>	<i>Aug</i>	<i>Sept</i>	<i>Oct</i>	<i>Nov</i>	<i>Dec</i>	
<i>Total Chlorine Sample Date(s):</i>													